

Table of contents

	Page
Safety notes / Technical support	G2

Introduction	G3

Technical data	G4

Approvals	G11

Options	G12

Mounting	G13

Electrical installation	G17

Signal output / Diagnostics	G22

Sensitivity / Maintenance	G27

Notes for use in Hazardous Locations	G28

Assembly VN ..040	G32

Assembly VN ..020 / VN ..030 with separate housing	G36

Subject to technical change and price change.

All dimensions in mm (inches).

We assume no liability for typing errors.

Different variations to those specified are possible.

Please contact our technical consultants.

Safety notes / Technical support

Notes

- Installation, maintenance and commissioning must be carried out only by qualified technical personnel.
- The product must be used only in the manner outlined in this instruction manual.

Special attention must be paid to warnings and notes as follows:



WARNING

Relates to a caution symbol on the product and means, that a failure to observe the necessary precautions can result in death, serious injury and/or considerable material damage.



WARNING




Relates to a caution symbol on the product and means, that a failure to observe the necessary precautions can result in death, serious injury and/or considerable material damage.

This symbol is used, when there is no corresponding caution symbol on the product.

CAUTION

A failure to observe the necessary precautions can result in considerable material damage.

Safety symbols

In manual and on product	Description
	CAUTION: refer to accompanying documents (manual) for details.
	Earth (ground) Terminal
	Protective Conductor Terminal

Technical support

Please contact your local supplier (see www.uwt.de for address). Otherwise you can contact:

UWT GmbH
 Westendstr. 5
 87488 Betzigau
 Germany

Tel. 0049 (0)831 57123-0
 Fax. 0049 (0)831 76879
info@uwt.de
www.uwt.de

Introduction

Applications


The device is used for level monitoring in all types of containers and silos.

It can be used with all powdery and granulated bulk materials that do not show a strong tendency to form crusts or deposits. Detection of solids in water is also possible.

The units can be delivered with a wide range of Ex-approvals for use in Gas and Dust Hazardous Areas.

A selection of fields of application:

- **Building materials industry**
lime, styrofoam, moulding sand, etc.
- **Food industry**
milk powder, flour, salt, etc.
- **Plastics industry**
plastics granules etc.
- **Timber industry**
- **Chemical industry**
- **Mechanical engineering**

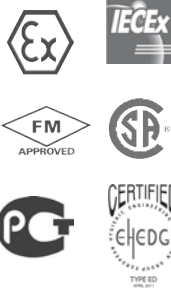

The VIBRANIVO oscillating probe is normally screwed into the lateral container wall so that it is level with the filling height to be registered and monitored.

The device can also be mounted from the top of the container. In this case an extension piece is used to mount the probe level with the height to be registered.



The length of the probe can be up to 4m (157") with an extension tube (VN ..030) or up to 20m (787") with an extension rope (VN 2050/ 6050).

The use of a sliding sleeve is recommended so that the switch point can be changed easily during operation of the device.

Function

The piezo-electrically stimulated oscillating fork vibrates at its mechanical resonance frequency. If the probe is covered by the bulk material, the damping thus generated is registered electronically and a corresponding signal output is actuated.

The oscillation of the fork ensures a certain self-cleaning.

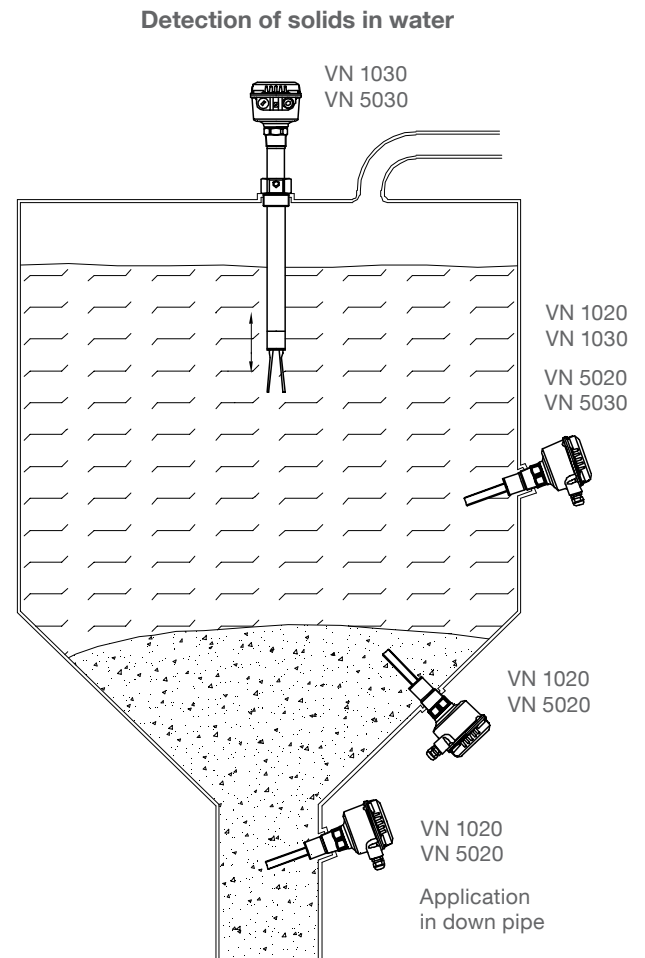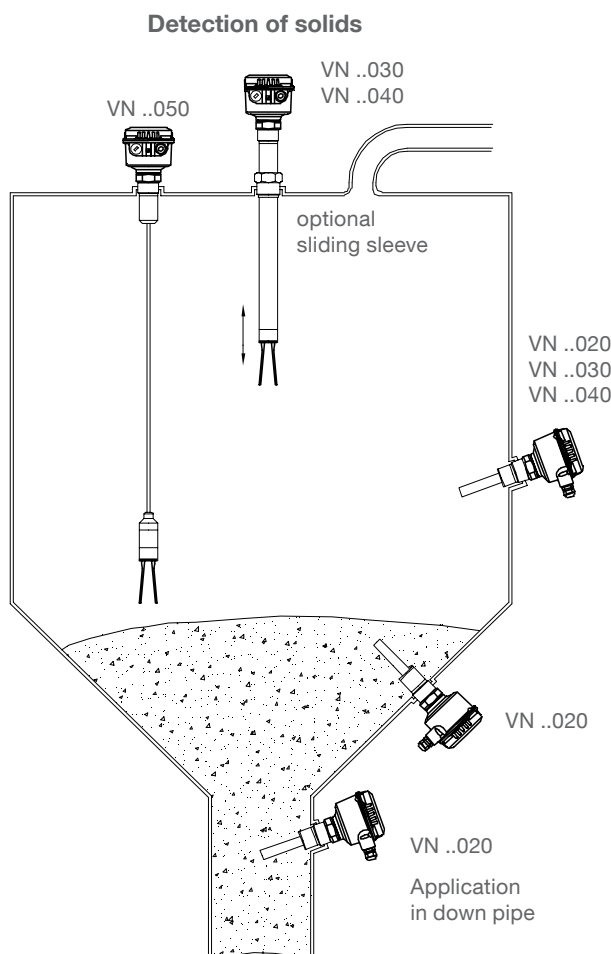


Technical data

Housing versions


Series VN 1000 / 2000

Standard

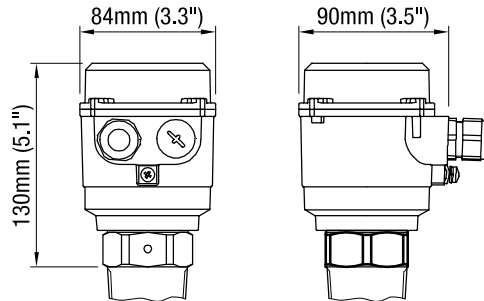


Series VN 5000 / 6000

Standard

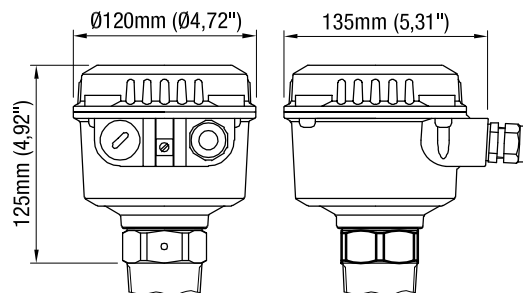


de

Explosionproof with increased safety terminal box

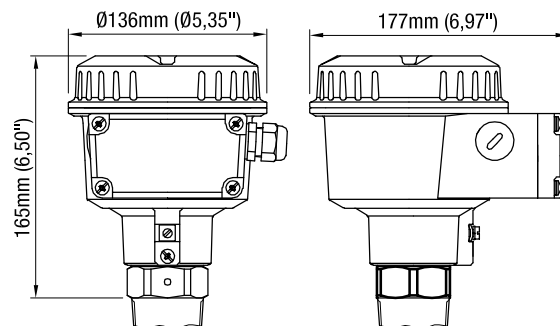

d


Flameproof / explosionproof

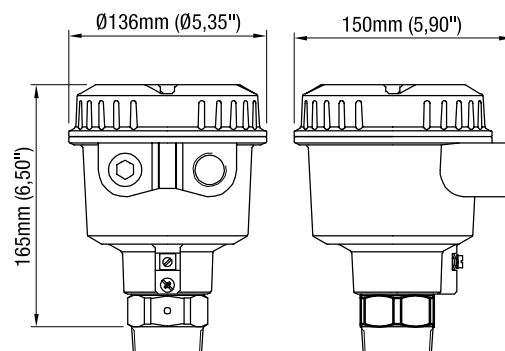

Technical Data

Extensions


VN ..020

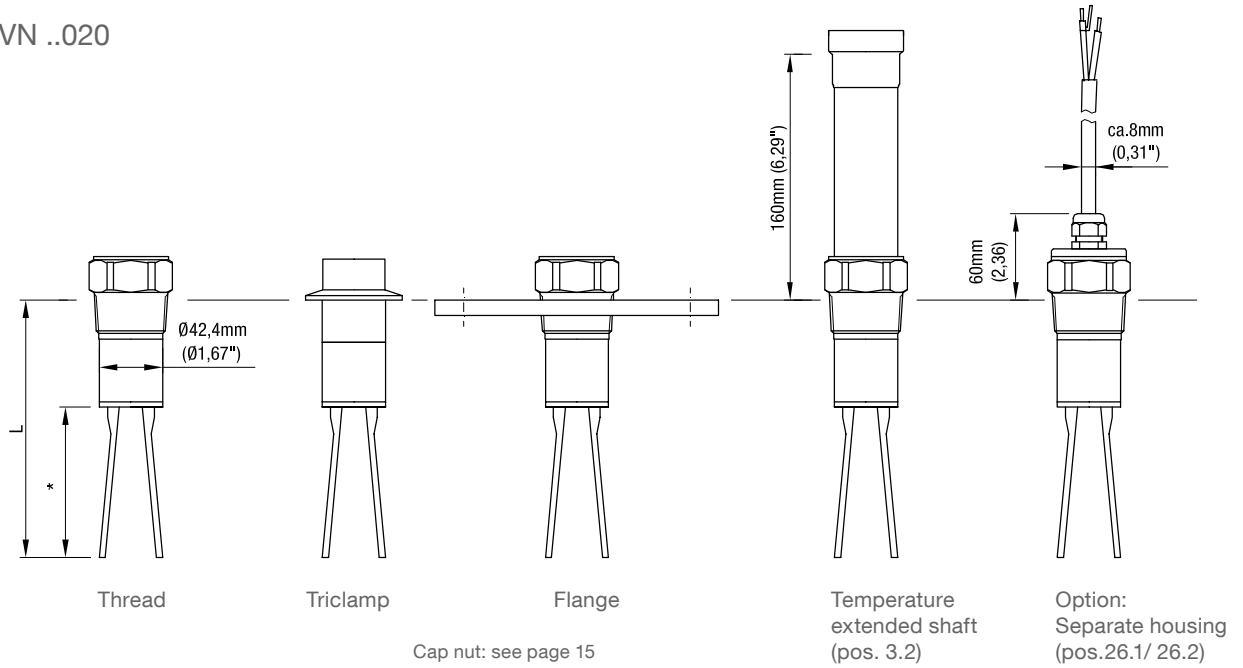

	L	
	without option	with option: enhanced sensitivity (pos. 26x) Vibrasil 70 (pos. 26a) Vibrasil 90 (pos. 26b)
VN 1020 VN 5020	165mm (6.5")	
VN 2020 VN 6020	235mm (9.25")	260mm (9.84")

* see page 6 bottom right


VN ..030

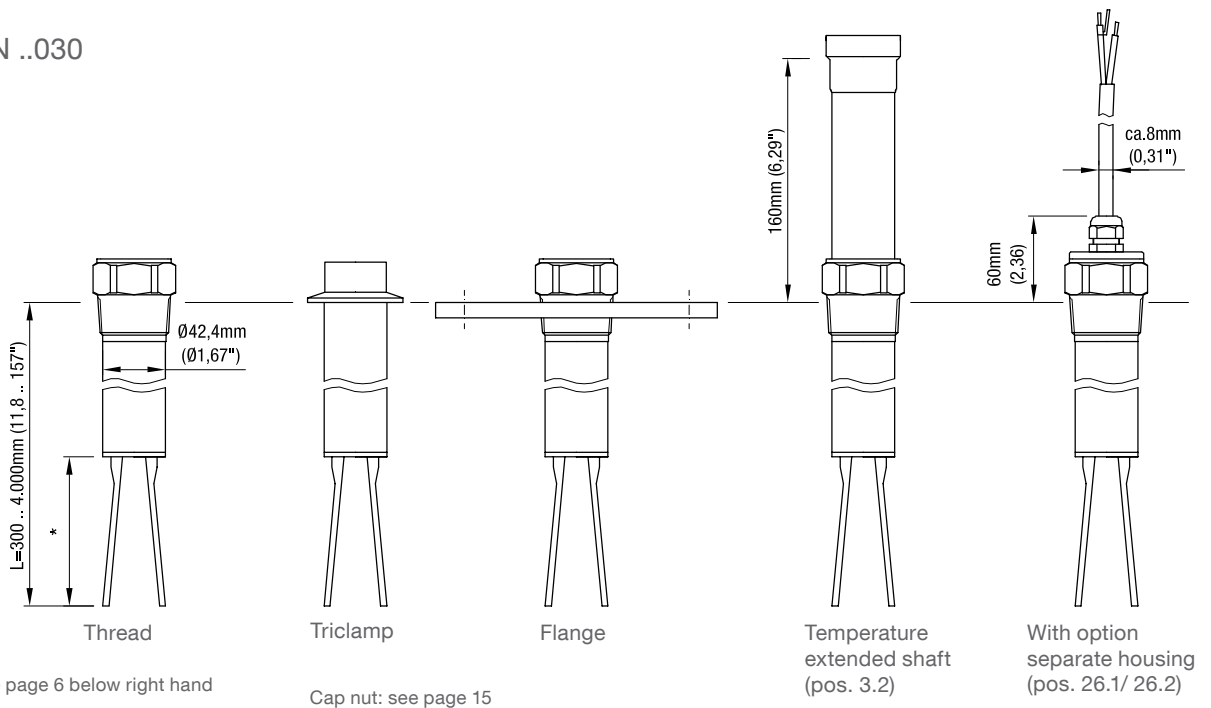

* see page 6 below right hand


Technical data

VN ..040

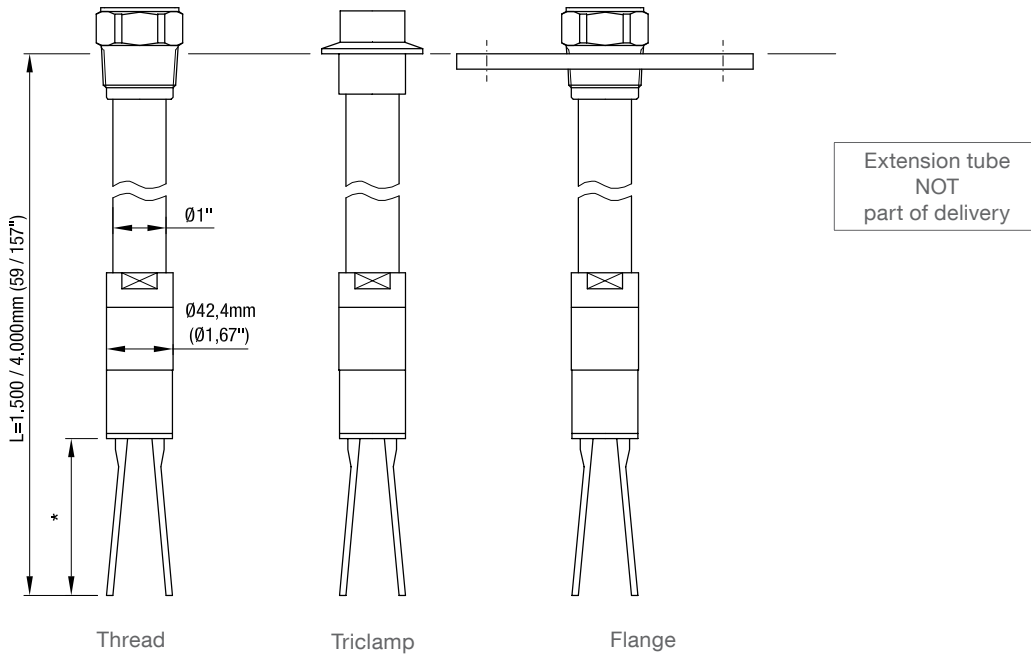


* see bottom right

VN ..050

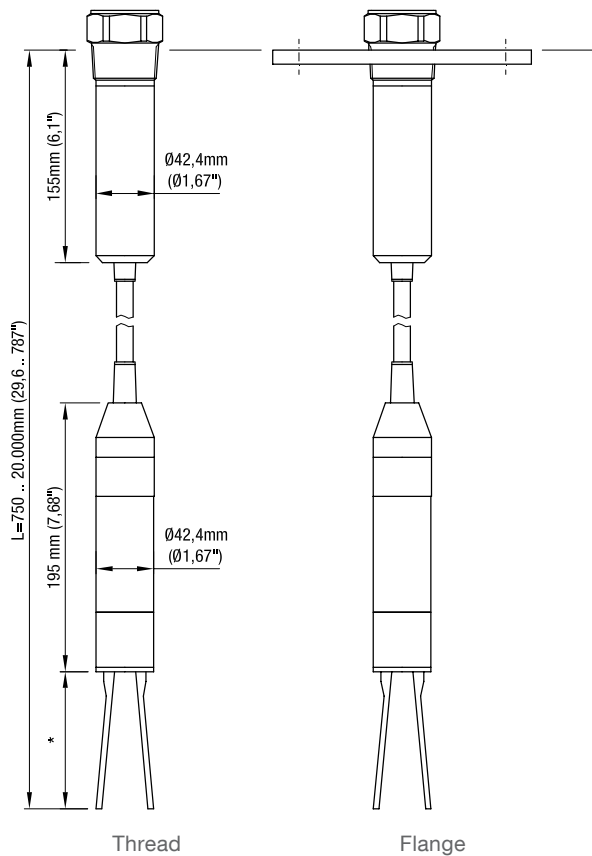

* see right

* Length of oscillating rods

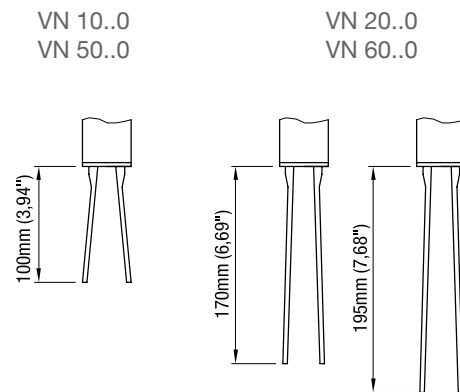

with option
 Enhanced sensitivity (pos.26x)
 Vibrasil® 70 (pos.26a)
 Vibrasil® 90 (pos.26b)

Technical data

Electrical data

Connection terminals	max. 4mm ² (AWG 12)
Cable entry	M20 x 1.5 screwed cable gland NPT 1/2" conduit connection NPT 3/4" conduit connection (only VN 5000 / 6000)
Signal delay	Sensor free -> covered ca. 1 sec Sensor covered -> free ca. 1..2 sec On the electronic module "Universal voltage Relay DPDT" is an electronic delay, adjustable up to 30sec.
Safety operation (FSL,FSH)	Switchable for minimum or maximum safety
Sensitivity	Adjustable in 2 levels (A/B)
Vibration frequency	VN 1000 / 5000: ca. 350Hz VN 2000 / 6000: ca. 125Hz ca. 90Hz (enhanced sensitivity)
Installation category	II
Pollution degree	2

Electronic modules	Universal voltage Relay SPDT (VN 1000/ 2000/ 5000/ 6000)	Universal voltage Relay DPDT (VN 1000/ 2000/ 5000/ 6000)	3-wire PNP (VN 1000/ 2000/ 5000/ 6000)
Power supply	19..230V AC 50-60Hz 19..55V DC +10%	19..230V AC 50-60Hz 19..55V (36V*)DC +10% * Version with intrinsic safe connection between Electronic module and Vibrating fork (see pos.4 in the selection list)	18V..50V DC +10%
Max. ripple of power supply	7 V _{ss} at DC	7 V _{ss} at DC	7 V _{ss}
Installed load	max. 8VA / 1,5W	max. 18VA / 2W	max. 1,5W
Signal output	Floating relay SPDT VN 1000 / 2000: AC max. 253V, 4A, 500VA at cos Phi = 1 DC max. 253V, 4A, 60W VN 5000 / 6000: AC max. 250V, 8A non inductive DC max. 30V, 5A non inductive	Floating relay DPDT VN 1000 / 2000: AC max. 253V, 4A, 500VA at cos Phi = 1 DC max. 253V, 4A, 60W VN 5000 / 6000: AC max. 250V, 8A non inductive DC max. 30V, 5A non inductive	Open Collector: permanent load max. 0.4A short-circuit and overload protected turn-on voltage: max. 50V (reverse protection)
Intrinsic safe ratings	-	-	-
Indicating light	Status of signal output by built-in LED	Status of signal output by built-in LED	Status of signal output by built-in LED
Isolation	Power supply to signal output: 2225 Vrms	Power supply to signal output: 2225 Vrms Signal output to signal output (DPDT): 2225 Vrms	-
Protection class	I	I	III

Technical data

Electronic modules	2-wire without contact (VN 1000/2000/ 5000/6000)	NAMUR IEC 60947-5-6 (VN 2000/ 6000)	8/16mA or 4-20mA (VN 1000/2000/ 5000/6000)	8/16mA (VN 1000/2000/ 5000/6000)
Power supply	19..230V 50/60Hz / DC +10%	ca. 7 ..9 V DC (spec. IEC 60947-5-6)	Non intrinsic safe version: 12.5 .. 36V DC +0% Intrinsic safe version: 12.5 .. 30V DC +0%	12.5 .. 36V DC +0%
Max. ripple of power supply	7 V _{ss} at DC	-	-	-
Installed load	max. 1.5VA / 1W	max. 30mA (for non intrinsic safe application)	max. 0.8W	max. 0.8W
Signal output	<p>Load current: min. 10mA max. 500mA permanent max. 2A < 200ms max. 5A < 50ms Voltage drop on the electronic module: max 7V with closed electric circuit.</p> <p>Cutoff current with open electric circuit: max 5mA.</p> <p>To enable a safe opening of relay contacts, the cutoff current will be set for some milliseconds to 0, when opening the electric circuit.</p> <p>Short-circuit- and overload-protected.</p>	<1mA or > 2,2mA (spec. IEC 60947-5-6)	<p>Setting 8/16mA: 8mA or 16mA +- 0.5mA.</p> <p>Setting 4-20mA: Output current depends on the vibration amplitude of the fork between 6mA for damped vibration and 20mA for full vibration. Resolution is 0.1mA.</p>	8mA or 16mA +- 1mA
Intrinsic safe ratings	-	<p>U_i 20V I_i 67mA P_i 0.17W C_i negligible small L_i negligible small</p>	<p>Intrinsic safe version: U_i 30V I_i 130mA P_i 0.8W C_i negligible small L_i negligible small</p>	-
Indicating light	Status of signal output by built-in LED	Status of signal output and diagnostics of vibration by built-in LED	Status of signal output and diagnostics of vibration by built-in LED	Status of signal output by built-in LED
Protection class	I	III	III	III

Technical data

Mechanical data

Housing Aluminium housing, powder coated RAL 5010 gentian blue

Degree of protection VN 1000/ 2000: IP 66 (EN 60529)
 VN 5000/ 6000 NEMA Type 4X, IP 66 (EN 60529)

Process connection / extension L Material: Stainless steel 1.4301 (304) (1.4541 (321) for flanges) or 1.4404 (316L) (food grade)
 Extension cable VN..050: PUR with carbon black (no food grade)
 Thread: R 1½" tapered DIN 2999 or NPT 1½" tapered ANSI B 1.20.1
 Triclamp
 Flanges according to selection

Oscillator Material: stainless steel 1.4404 / 1.4581 (316L) (food grade)
 Surface treatment of vibrating rods: polished, Ra ≤ 0,75µm; teflon (on request)

Overall weight (ca.)


VN 1000/ 2000	Standard housing	Extension
VN 1020/ 2020:	1.6kg (3.5 lbs)	-
VN 1030/ 2030:	1.6kg (3.5 lbs)	+2.5kg/m (+5.5 lbs per 39.3")
VN 1040/ 2040:	2.0kg (4.4 lbs)	delivery without extension tube
VN 1050/ 2050:	4.0kg (8.8 lbs)	+0.5kg/m (+1.1 lbs per 39.3")

VN 5000/ 6000	Standard housing	de-housing	d-housing	Extension
VN 5020/ 6020:	2.1kg (4.6 lbs)	3.2kg (7 lbs)	2.8kg (6.2 lbs)	-
VN 5030/ 6030:	2.1kg (4.6 lbs)	3.2kg (7 lbs)	2.8kg (6.2 lbs)	+2.5kg/m (+5.5 lbs per 39.3")
VN 5040/ 6040:	2.5kg (5.5 lbs)	3.6kg (7.9 lbs)	3.2kg (7 lbs)	delivery without extension tube
VN 5050/ 6050:	4.5kg (9.9 lbs)	5.6kg (12.3 lbs)	5.2kg (11.4 lbs)	+0.5kg/m (+1.1 lbs per 39.3")

Technical data

Operating conditions

Ambient temp. (housing)	-40°C.. +60°C (-40 .. +140°F) -25°C.. +60°C (-13 .. +140°F)	VN ..020/ VN ..030 and VN ..040 VN ..050
Process temperature	-40°C.. +150°C (-40 .. +302°F) -40°C.. +110°C (-40 .. +230°F) -25°C.. +80°C (-13 .. +176°F)	VN ..020/ VN ..030 and VN ..040 Mounting for process temperature up to 150°C (302°F): see drawing VN ..020/ VN ..030 with Ex approval and separate housing (price list option 26.1, 26.2) VN ..050

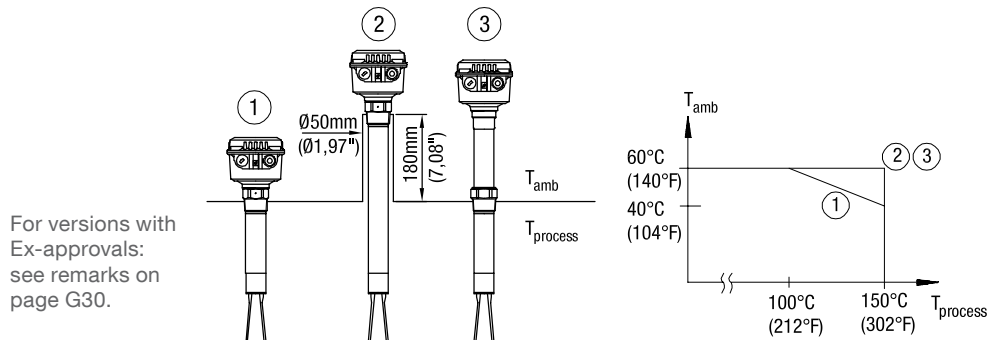

VN 1000/ 5000:	Setting B ca. 50 g/l (3lb/ft ³)	Setting A ca. 150 g/l (9lb/ft ³)	
VN 2000/ 6000:	ca. 20 g/l (1.2lb/ft ³) ca. 5 g/l (0.3lb/ft ³)	ca. 75 g/l (4.5lb/ft ³) ca. 20 g/l (1.2lb/ft ³)	Standard version Enhanced sensitivity

Features of bulk material	No strong caking tendencies Max. grain size 10mm (0.39")		
Max. mechanical load	600N laterally (on oscillator rods) Recommended protection in case of high material loading: mounting of a protective canopy above the probe		
Max. mechanical torque	300 Nm 100 Nm	VN ..030 VN ..040	
Max. tractive force	2kN	VN ..050	
Max. process pressure	16bar (232psi) 16bar (232psi)	VN ..020, VN ..030 VN ..040 (depending on the quality of the local mounted sealing of the extension tube)	
	6bar (87psi)	VN ..050	
	For versions with Ex-approvals: see remarks on page G28.		
Relative Humidity	0-100%, suitable for outdoor use		
Altitude	max. 2.000m (6.562ft)		

Approvals

	VN 1000	VN 2000	VN 5000	VN 6000		
General Purpose * (Ordinary Locations)	•	•	•	•	CE FM CSA	EN 61010-1 (IEC/CB)
Hazardous Locations *	•	•	•	•	ATEX	Dust explosion ATEX II 1D Ex t IIIC T! Da IP6X and 1/2 D Ex t IIIC T! Da/Db IP6X Gas explosion Intrinsic safe Flameproof Flameproof / increased safety ATEX II 1G Ex ia IIC T! Ga and 1/2G Ex ia IIC T! Ga/Gb ATEX II 2G Ex d [ia] IIC T! Gb ATEX II 2G Ex de [ia] IIC T! Gb
	•	•	•	•	IEC-Ex	Dust explosion IEC-Ex t IIIC T! Da IP6X and t IIIC T! Da/Db IP6X Gas explosion Intrinsic safe Flameproof Flameproof / increased safety IEC-Ex ia IIC T! Ga and Ga/Gb IEC-Ex d [ia] IIC T! Gb IEC-Ex de [ia] IIC T! Gb
	•	•	•	•	FM	Dust explosion Cl. II, III Div. 1 Gr. E,F,G Gas explosion Intrinsic safe IS Cl. I Div. 1 Gr. A-D Cl. I Zone 0 and 0/1 AEx ia IIC XP-IS Cl. I Div. 1 Gr. B-D Cl. I Zone 1 AEx d [ia] IIC Cl. I Zone 1 AEx de [ia] IIC
	•	•	•	•	CSA	Dust explosion Cl. II, III Div. 1 Gr. E,F,G Ex DIP A20 and A20/21 IS Cl. I Div. 1 Gr. A-D Cl. I Zone 0 and Zone 0/1 Ex ia IIC XP-IS Cl. I Div. 1 Gr. B-D Cl. I Zone 1 Ex d [ia] IIC Cl. I Zone 1 Ex de [ia] IIC
	•	•			RTN-Ex	Dust explosion
						Detailed allocation of types and electronic modules to approvals: see selection list.
EMC	•	•	•	•		EN 61326 -A1
Hygiene *	•	•	•	•	EHDG	
RoHS conform	•	•	•	•		According to directive 2011/65/EU
Food grade material	•	•	•	•		According to directive 1935/2004/EC

Pressure Equipment Directive (97/23/EC)

The units are not subject to this directive, because they are classified as „pressure-keeping equipment“ and do not have a pressurized housing (see Art.1, clause 2.1.4).
 The units are designed and manufactured in accordance to the Pressure Equipment Directive.



The unit is NOT intended for use as a “equipment part with safety function (Art.1, clause 2.1.3).
 If the units should be used as „equipment part with safety function, please contact the manufacturer.

* depending on selected version in the selection list.

Options

Weather protection-cover


When the measuring device is used outdoor, the use of the weather protection-cover is recommended. It protects the device from all atmospheric influences such as:

- rain water
- condensation of water
- excessively high temperatures due to insolation
- excessively low temperatures in winter

Material: PE, weather and temperature stable




Not available for housing version d and de.
 For use in Hazardous Locations: only permitted for zone 2 and 22 or Division 2.

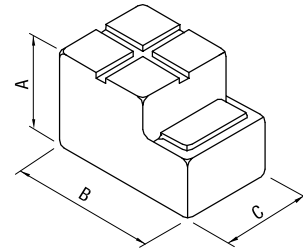

Sliding sleeve

VN ..030 G2" ISO 228 or 2" NPT ANSI B 1.20.1
 Material: 1.4301 (304) or 1.4404 (316L)
 Sealing material to the extension tube: viton

VN ..040 Because the outer diameters of the locally mounted 1" tube may differ, sliding sleeve on request.
 Not for Hazardous Locations.

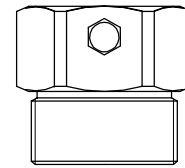


Mounting set

Screws and washers for fixing the unit on a flange.

Glass window in lid

To see the indicating light on the electronic module from outside.


Not available for housing version d and de.

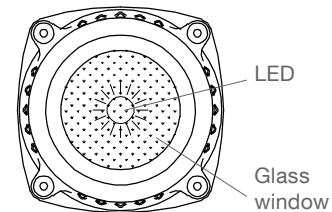

Bulb in cable gland

Bright indicating light seen from outside.


Not available for use in Hazardous Locations.

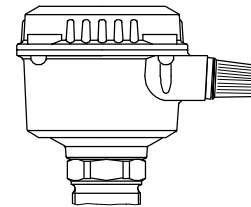

Plug 4-pole (incl. PE)

Used instead of cable gland.

Not available for use in Hazardous Locations and FM / CSA general Purpose.

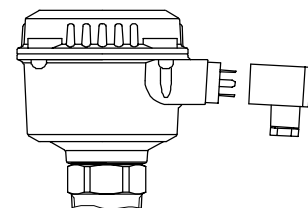

EHEDG approval

EHEDG conform design (material and construction in contact with the process).

Approved with flush welding socket
 Material: aluminium or 1.4301(304) or 1.4404 (316L)
 (details see: mounting instructions EHEDG version, page G15).

Mounting

! General Safety Instructions

Detection of solids in water **CAUTION:**
 Detection of solids in water only permitted with types VN 1020/ 1030/ 5020/ 5030.
 Other types on request.

Process pressure Improper installation may result in loss of process pressure.


Chemical resistance against the medium Materials of construction are chosen based on their chemical compatibility (or inertness) for general purposes. For exposure to specific environments, check with chemical compatibility charts before installing.

VN ..050:
 Consider the chemical compatibility of the extension cable (material PUR) and the rubber seals on both ends of the extension cable (material neoprene).

Mechanical load The torque at the fastening spot must not exceed 300Nm (VN ..030) or 100Nm (VN ..040)


Maximum length „L“ in relation to the deviation (in degrees) from vertical installation:

Max. deviation	Max. length „L“
5°	4000 mm (157.5“)
45°	1200 mm (47.24“)
>45°	600 mm (23.62“)

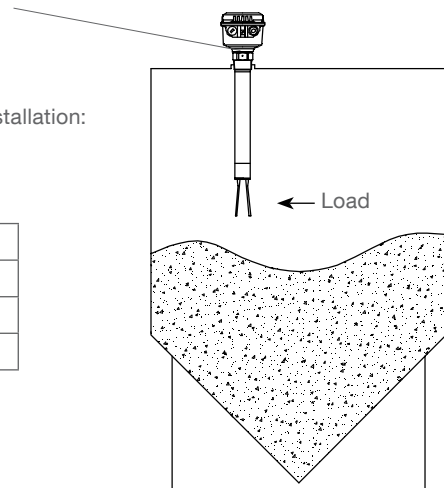

Mounting location Comply with distance from incoming material and from the silo wall. The installation has to be done in a way, that the sensor elements cannot hit the wall of the silo. The flow of the medium and fixtures in the container must be considered. This is especially important for extension lengths of more than 3m (118.1“).

2“ sliding sleeve Tighten both locking screws M8 with 20 Nm to obtain resistance against pressure.

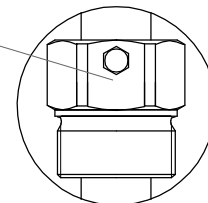

Flange mounting A plastic sealing must be used to tighten the flange.

Fastening of the 1½” process connection Mounting torque for the 1½” thread may not exceed 80Nm. Use a 50mm (1.97”) open-end wrench (do not turn the housing).

EHEDG-approval / food grade material The materials are available for the use under normal and predictable applications (according to directive 1935/2004 Art.3). Other conditions can influence the safety.

Mounting

! Additional Safety Instructions for Hazardous Locations

Installation regulations For the use of devices in Hazardous Locations the respectively valid installation regulations must be observed.

Sparks The installation has to be carried out in a way, that mechanical friction or impact does not cause sparks between the aluminium enclosure and steel.


Mounting in application with Partition wall, that separates Zone 0 (Cat. 1G) from Zone 1 (Cat 2G). VN ..030 with sliding sleeve: The use of the sliding sleeve is not allowed.
 VN ..040 and VN ..050: The unit has no safe separation between Zone 0 and Zone 1. It must be considered, that gas can pass from Zone 0 through the unit to Zone 1.

Mounting instructions

Oscillating rods Do not bend, shorten or extend the oscillating rods since this will destroy the device.

Rotatable housing and orientation marking of oscillating rods

The housing can be rotated against the threaded connection after mounting.
 For the d- and de- housing: Fixing screw must be unfastened to enable rotation. Fix the screw again, when the housing has the right position.

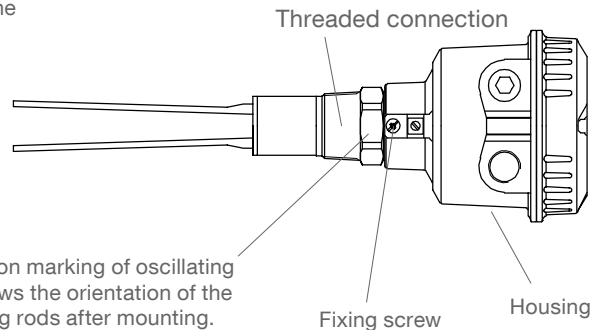

Direction of the cable glands When the unit is mounted from the side, ensure, that the cable glands are closed and face downwards to avoid water penetrating the housing.

Sealing Seal the 1½" thread with Teflon tape in case of process pressure

Switching point Heavy bulk material -> the signal output switches, when the oscillating rods are covered a few mm.
 Light bulk material -> the signal output switches, when the oscillating rods are covered a few cm.

Mounting


EHEDG-approval

The sealing ring ensures a pressure tight sealing of the process connection.


Metal-metal sealing:

- The support muß be plane and without any gap.
- Fixing torque 100Nm

The quality of the welding with the container wall must be according to the respective regulations (e.g. gaps, transitions, surface finish).

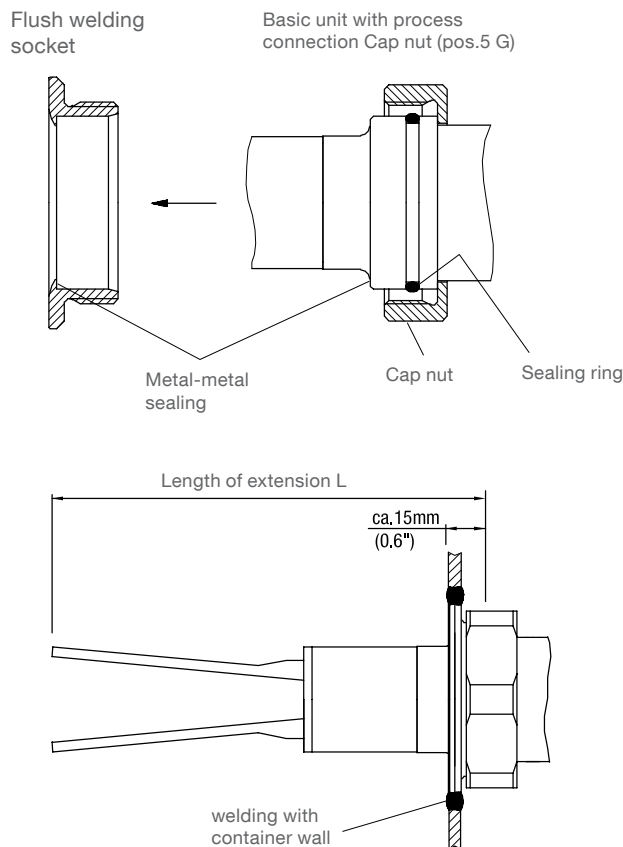


Dimension of flush welding socket (for optional on site manufacturing):

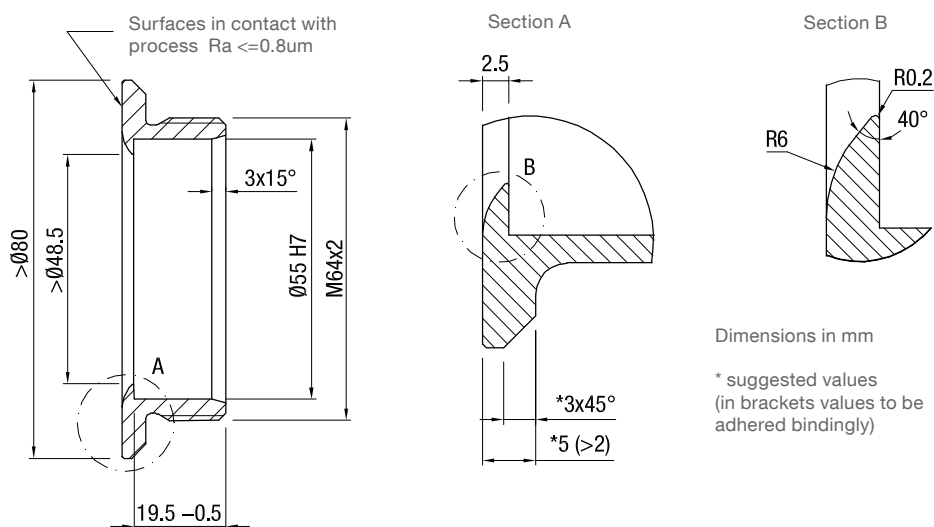

Dimensions in mm

* suggested values
 (in brackets values to be adhered bindingly)

Mounting

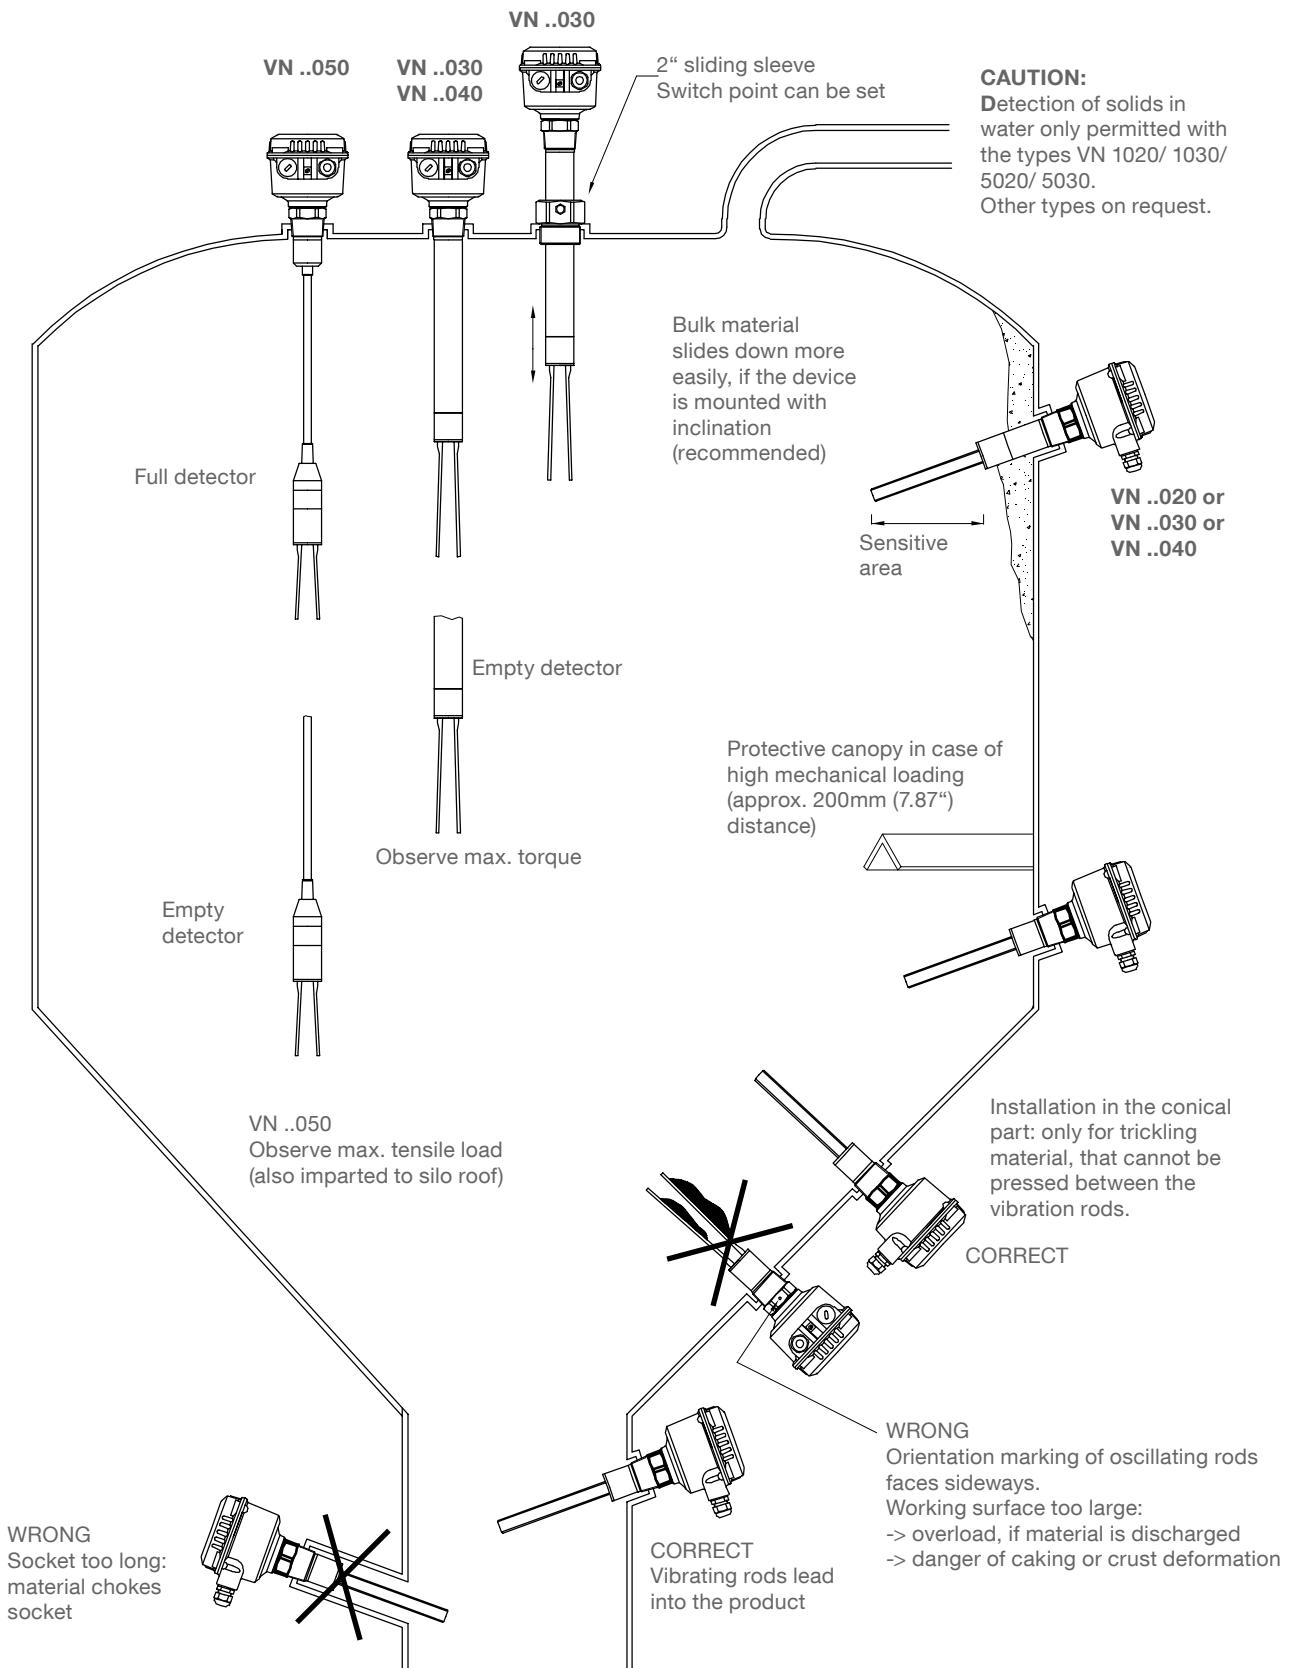

Electrical installation

General Safety Instructions

Handling

⚠ In case of inexpert handling or handling malpractice, the electric safety of the device cannot be guaranteed.

Installation regulations

The local regulations or VDE 0100 (Regulations of German Electrotechnical Engineers) must be observed.

Fuse

Use a fuse as stated in the connection diagrams (page G20 and G21).

RCCB protection

In the case of a defect, the distribution voltage must automatically be cut off by a RCCB protection switch to protect the user of the device from indirect contact with dangerous electric tensions.

Power supply switch

A voltage-disconnecting switch must be provided near the device.

Wiring diagram

The electrical connections are made in accordance with the wiring diagram.

Supply voltage

Compare the supply voltage applied with the specifications given on the electronic module and name plate before switching the device on.

Cable gland

Make sure that the screwed cable gland safely seals the cable and that it is tight (danger of water intrusion).
 Cable glands that are not used have to be locked with a closing element.

Conduit system

In case of using a conduit system (with NPT thread) instead of a cable gland the regulations of the country, where the unit is installed, must be observed. The conduit must have a tapered thread either NPT 1/2" or NPT 3/4" in accordance with the unit and ANSI B 1.20.1. Not used inlets must be closed tight with a metal closing element.

Field wiring cables

All field wirings must have insulation suitable for at least 250V AC. The temperature rating must be at least 90°C (194°F).

Connecting the terminals

Make sure that max. 8mm (0.31") of the pigtailed are bared (danger of contact with live parts).

Relay and transistor protection

Provide protection for relay contacts and output transistors to protect the device against inductive load surges.

Protection against static charging

The housing of the unit (and for the version with separate housing also the vibrating fork part) must be grounded to avoid static charging of the unit. This is particularly important for applications with pneumatic conveying and non-metallic containers .



Additional Safety Instructions for Hazardous Locations

Installation in Zone 20

If installing the whole unit in zone 20, the power supply shall be rated for a prospective short circuit current of not more than 10kA (details of EN 61241-14/ EN 60079-14 must be obeyed)

Installation in Zone 0 (Electronics: „NAMUR“ and “8/16mA or 4-20mA”)

The intrinsic safe supply circuit must have galvanic isolation to non intrinsic safe part. Otherwise measures for protection against lightning must be taken (see EN 60079-14).

Power supply (Electronics: „NAMUR“ and “8/16mA or 4-20mA”)

The type of protection (intrinsic safe) is only valid when connecting to a certified intrinsic safe power supply (associated apparatus).

Field wiring terminals for “de” housing

Fixing torque :	0,5-0,6Nm
Remove wire isolation:	9mm


Field wiring

A strain relief must be provided for the field wiring cables, when the device is installed with the factory provided cable glands.


Electrical installation

External equipotential bonding terminal

Connect with equipotential bonding to the plant

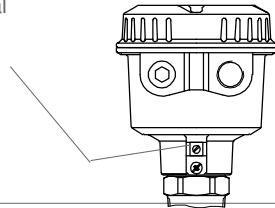

Version with separate housing must be grounded additionally at the vibrating fork.

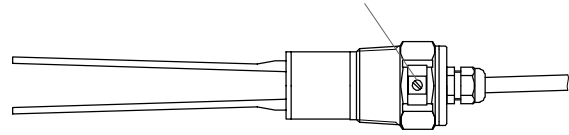

Cable glands and conduit system for ATEX / IEC-Ex (Dust and Gas Hazardous Locations)

Installation according to the regulations of the country, where the product is installed.

Not used entries have to be closed with blanking elements certified for this purpose.

Where available the factory provided parts must be used.

A strain relief must be provided for the field wiring cables, when the device is installed with the factory provided cable glands.

The diameter of the field wiring cable must match to the clamping range of the cable clamp.

If other than the factory provided parts are used, following must be ensured:

The parts must have an approval adequate to the approval of the level sensor (certificate and type of protection).

The approved temperature range must be from the min. ambient temperature of the level sensor to the max. ambient temperature of the level sensor increased by 10K.

The parts must be mounted according to the instructions of the supplier.

Installation of a flameproof/ explosion proof enclosure with a conduit system:

In a conduit system single electric conductors are installed in a certified pipe system. This pipe system is in a flameproof / explosion proof construction as well. The flameproof / explosion proof enclosure and the pipe system needs to be sealed from each other by a certified flameproof seal of a type "d" or explosion proof of a type "XP". This seals shall be installed directly in or at the conduit entries of the flameproof / explosion proof enclosure. Not used entries have to be closed with blanking elements certified for this purpose (flameproof type "d" or explosion proof type "XP").

Conduit system for FM and CSA

(Dust and Gas Hazardous Locations)

General requirements:

In addition the regulations of the country must be observed. The used flameproof seals and blanking elements must have an adequate type approval and a temperature range of at least -40°C (-40°F) to $+80^{\circ}\text{C}$ (176°F). In addition they shall be suitable for the conditions and correctly installed. Where available the provided original parts of the manufacturer must be used.

Installation of a flameproof enclosure "d" with a conduit system:

In a conduit system single electric conductors are installed in a certified pipe system. This pipe system is in a flameproof construction as well. The flameproof enclosure "d" and the pipe system needs to be sealed from each other by a certified flameproof seal. Conduit entries of a flameproof enclosure "d" shall have installed the flameproof seal within 18 inches from the enclosure wall. Not used entries have to be closed with adequate blanking elements of a certified flameproof type AEx Cl.1 Div.1 A.

Commissioning

Commissioning only with closed lid.

Exception: Units with protection method Intrinsic safety ("NAMUR" and "8/16mA or 4-20mA")

Opening the lid



Units with flameproof GasExplosion approval (d-housing):

To prevent ignition of hazardous atmospheres, do not remove the lid (cover) while circuits are alive.



Units with Dust Explosion approval:

Before opening the lid ensure, that no dust deposits or cloudss are present.

Do not remove the lid (cover) when the power is live.


Units with protection method Intrinsic safety ("NAMUR" and "8/16mA or 4-20mA"):

The lid can be removed when the power is live.

Electrical installation


Connection

VN 1000/ 2000: Standard-housing

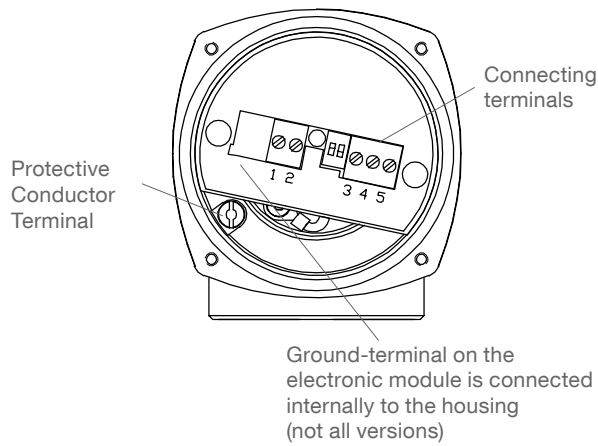


VN 5000/ 6000: Standard- and d-housing

Connection is done directly on the Electronic module

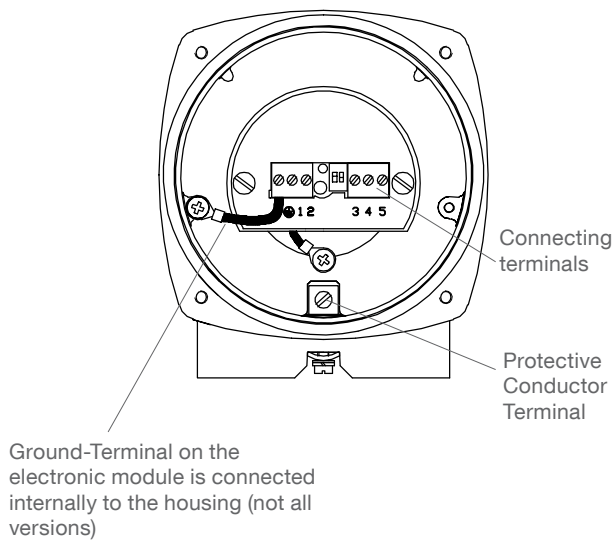

de-housing

Connection via the terminals inside the increased safety area.

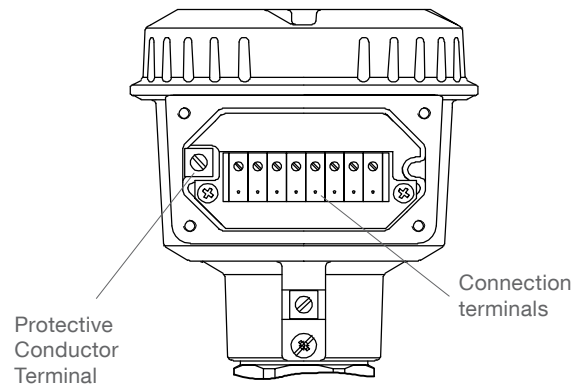

Electrical installation

Universal voltage

Relay SPDT

Power supply:

19..230V 50-60Hz +10% 8VA
 19..55V DC +10% 1,5W

Signal output:

Floating relay SPDT


VN 1000/ 2000:

AC max. 253V, 4A, 500VA at cos Phi = 1
 DC max. 253V, 4A, 60W

VN 5000/ 6000:

AC max. 250V, 8A, non inductive
 DC max. 30V, 5A, non inductive

Fuse on signal output: max 10A

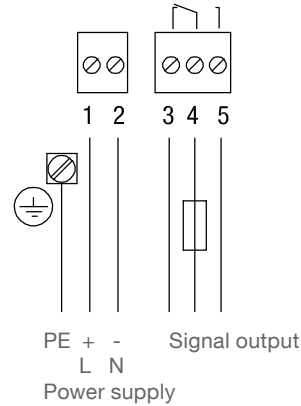

Universal voltage

Relay DPDT

Power supply:

19..230V 50-60Hz +10% 18VA
 19..55V (36V*) DC +10% 2W

Signal output:

Floating relay DPDT

VN 1000/ 2000:


AC max. 253V, 4A, 500VA at cos Phi = 1
 DC max. 253V, 4A, 60W

VN 5000/ 6000:

AC max. 250V, 8A, non inductive
 DC max. 30V, 5A, non inductive

Fuse on signal output: max 10A

* Version with intrinsic safe connection between electronic module and vibration fork (see pos.4 in the selection list)

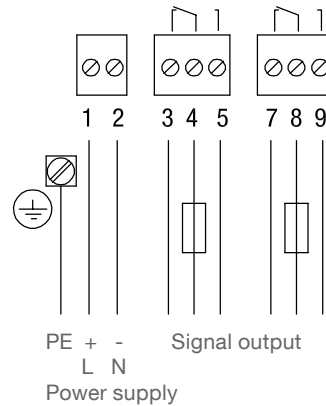

3-wire

PNP

Power supply:

18 .. 50V DC +10% 1,5W


Fuse: max 4A

Signal output:

max. 0,4A

Load for example:

PLC, relay, contactor, bulb

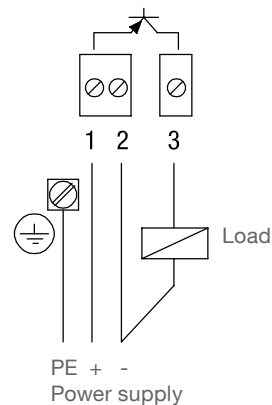

Electrical installation

2-wire

without contact


Power supply:

19..230V 50/60Hz +10% 1,5VA
 19..230V DC +10% 1W

Load:

max. 0,5A permanent
 (detailed ratings see
 "Technical data")

Load for example:
 relay, contactor, bulb

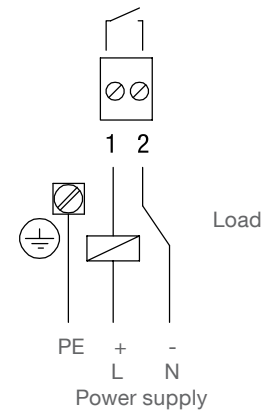


NAMUR IEC 60947-5-6

Power supply:

ca. 7..9 V DC
 intrinsic safe
 (spec. IEC 60947-5-6)

<1mA or > 2,2mA
 (spec. IEC 60947-5-6)

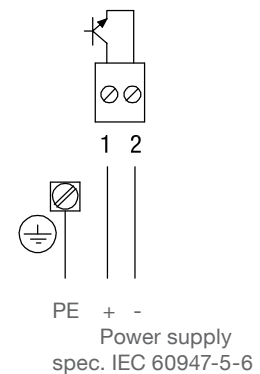

8/16mA or 4-20mA

Power supply:


Non intrinsic safe version:
 12,5..36V DC +0%

Intrinsic safe version:
 12,5..30V DC +0%

Signal output

Setting 8/16mA:
 8mA or 16mA

Setting 4-20mA:
 Output current depends on the
 vibration amplitude of the fork: 6mA for
 dampened vibration and 20mA for full
 vibration.

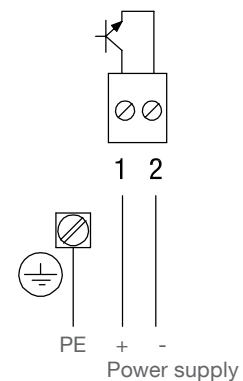


8/16mA

Power supply:

12,5..36V DC +0%

Signal output

8mA or 16mA

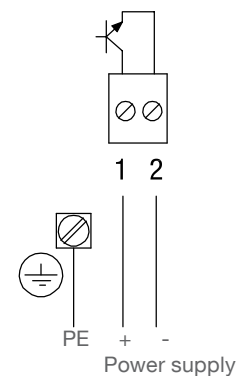

Signal output

Electronic modules:

Universal voltage
 (Relay SPDT and DPDT)

3-wire
 PNP

2-wire
 without contact

8/16mA

NAMUR
 (IEC 60947-5-6)

FSL / FSH or Characteristic Setting

Remark: „FSH/FSL“ is used for electronic modules:
 Universal voltage, 3-wire, 2-wire
 "Characteristic" is used for electronic module:
 NAMUR

FSH




If the sensor is used to indicate full load, set to Fail Safe High or Falling Characteristic. Power failure or line break is regarded as „full“ signal (protection against overcharging).

FSL



If the sensor is used to indicate empty load, set to Fail Safe Low or Rising Characteristic. Power failure or line break is regarded as „empty“ signal (protection against running dry).

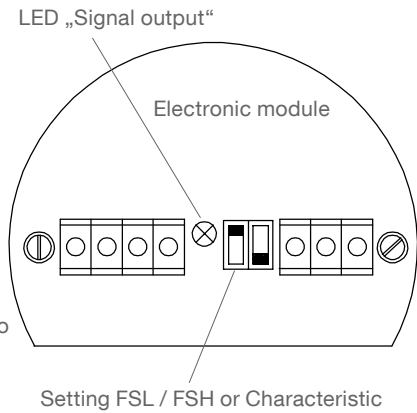

Signal output



Setting	FSL	FSH
Relay SPDT		
Relay DPDT		
3-wire PNP		
2-wire without contact		
8/16mA	I = 16mA	I = 8mA
LED „Signal output“		

Signal output

Setting	FSL	FSH
Relay SPDT		
Relay DPDT		
3-wire PNP		
2-wire without contact		
8/16mA	I = 8mA	I = 16mA
LED „Signal output“		

Setting	FSL	FSH
NAMUR IEC 60947-5-6		
LED „Signal output“		

Setting	FSL	FSH
NAMUR IEC 60947-5-6		
LED „Signal output“		

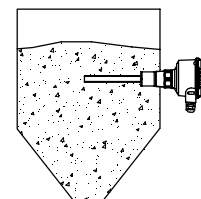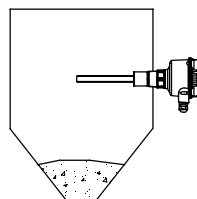

Signal output delay / Diagnosis

Signal output delay


Electronic module
Universal voltage
 (Relay DPDT)

Signal output delay

The signal output can be delayed, adjustable from 0 up to ca. 30 seconds. Clockwise turning of the potentiometer increases the delay time.

Potentiometer T1:
 Delay when output switches from sensor covered -> free

Potentiometer T2:
 Delay when output switches from sensor free -> covered

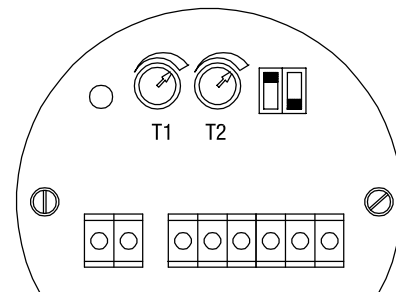

Diagnostics


Electronic module
NAMUR
 (IEC 60947-5-6)

“TEST” Button

If the sensor is not covered with material:
 By pressing this button, the vibration will stop and the signal output will switch to indicate “covered sensor”. This allows to test the vibration and the electronics for function without removing the sensor from the silo.

Remark: By pressing the button, the internal signal from the piezo-element, that indicates the vibration of the fork, is shortened. The electronics miss the vibration signal and indicates “covered sensor”.

If the sensor is covered with material:
 Pressing of this button has no effect.

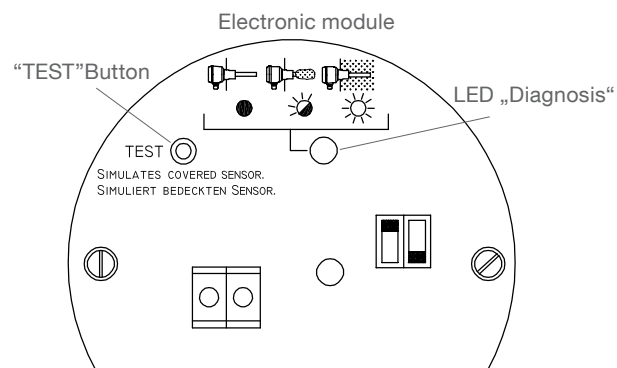

Weak vibration Diagnosis: LED “Diagnosis”

The quality of the measurement is related to the vibration amplitude of the sensor and can be evaluated by the internal LED „Diagnostics“ as follows:

- **Safe measurement, clean fork (LED is off):**
 The vibration amplitude is strong. There is enough safety to the switching point.
- **Weak vibration amplitude (LED is blinking):**
 The sensor is still working but it can happen that gradually the amplitude decreases further (maybe by increasing material build up) and the measurement fails. If low vibration amplitude is indicated the sensitivity setting should be changed from „20g/l“ to „75 g/l“ (or from „5g/l“ to „20g/l“ on version with enhanced sensitivity) if material density is not too low and the fork should be cleaned from material. Remark: By shifting the setting to “75g/l” (or to „20g/l“ on version with enhanced sensitivity), the internal amplification of the vibration signal in the electronic is increased. This allows more build up of material.
- **Fork fully covered (LED is on):**
 The sensor is fully covered with material. The vibration has stopped.

Signal output and Diagnosis


Electronic module
8/16mA or 4-20mA

The output can either be set to give 8/16mA or to give 4-20mA. On setting 4-20mA the output depends on the amplitude of the vibration of the fork.

Characteristic setting

▼ If the sensor is used to indicate full load, set to Falling Characteristic. Power failure or line break is regarded as „full“ signal (protection against overcharging).

▲ If the sensor is used to indicate empty load, set to Rising Characteristic. Power failure or line break is regarded as „empty“ signal (protection against running dry).

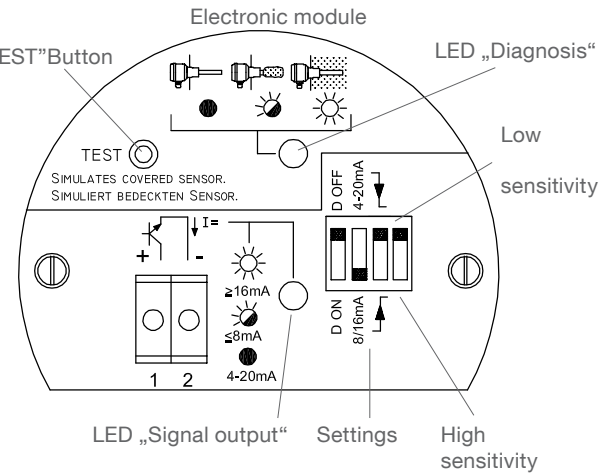

	Low sensitivity	High sensitivity
VN 1000/ 5000	150g/l (9lb/ft³)	50g/l (3lb/ft³)
VN 2000/ 6000	75g/l (4,5lb/ft³)	20g/l (1.2lb/ft³)
VN 2000/ 6000 with enhanced sensitivity	20g/l (1.2lb/ft³)	5g/l (0.3lb/ft³)

Weak vibration diagnosis

The quality of the measurement is related to the vibration amplitude of the sensor and can be evaluated by the output current and by the internal LED „Diagnosis“ as follows:

- **Safe measurement (clean fork):**

The vibration amplitude is strong. There is enough safety to the switching point.

- **Weak vibration amplitude:**

A fork with so much material build up, that a weak vibration amplitude is indicated. The sensor is still working, but it can happen, that gradually the amplitude decreases further (maybe by increasing material build up) and the measurement fails. If low vibration amplitude is indicated, the sensitivity setting should be changed from „High sensitivity“ to „Low sensitivity“, if material density is not too low, and the fork should be cleaned from material. Remark: By shifting the setting to „Low sensitivity“, the internal amplification of the vibration signal in the electronic is increased. This allows more build up of material.

- **Fork fully covered:**

The sensor is fully covered with material. The vibration has stopped.

“TEST” Button

If the sensor is not covered with material:

By pressing this button, the vibration will stop and the signal output will switch to indicate “covered sensor”. This allows to test the vibration and the electronic for function without removing the sensor from the silo.

Remark: By pressing the button, the internal signal from the piezo-element, that indicates the vibration of the fork, is shortened. The electronic misses the vibration signal and indicates “covered sensor”.

If the sensor is covered with material:

Pressing of this button has no effect.

Factory provided settings

- D OFF
- 8/16mA
-
- High sensitivity

Signal output and Diagnosis

Electronic module
8/16mA or 4-20mA

Output setting: 8/16mA

The figure illustrates the output current depending on the situation with:

- Safe measurement (clean fork).
- Weak vibration amplitude: a fork with so much material build up, that a weak vibration is indicated.
- Fork fully covered.

The output current can indicate the weak vibration with diagnostics setting „D ON“.

Diagnosis off (setting „D OFF“):

The output changes between 8mA and 16mA.

Diagnosis on (setting „D ON“):

The output will change from 16mA to 20mA and from 8mA to 6mA, if the vibration is weak. This enables an evaluation on an external 4-20mA power supply. There is an internal delay of 10 seconds, until the change from 16mA to 20mA and from 8mA to 6mA happens, so that the external power supply does not indicate „weak vibration“, when the vibration is stopped and is started during normal (safe) measurement operation.

Characteristic setting	▼	▲	▼	▲	▼	▲
D setting	D ON	I= 16mA	I= 8mA	I= 16mA	I= 8mA	I= 16mA
		I= 20mA	I= 6mA	I= 8mA	I= 16mA	I= 16mA
LED „Signal output“						
LED „Diagnosis“						

Example of evaluating the diagnosis of weak vibration amplitude:


Connection of an external Limit Value Monitor with 4-20mA input and two relay outputs.
 (Fitting units can be ordered as accessories, see price list)

Relay 1 indicates the situation: Full / empty.

Relay 2 works as a diagnostics output to indicate: Safe measurement / Non safe measurement (weak vibration).

Relay 1:
 Full/empty
 Set switching point to **10mA**.

Relay 2:
 Diagnosis
 Set switching point to:
 ▼ **18mA** for setting "falling characteristic"
 ▲ **7mA** for setting "rising characteristic"

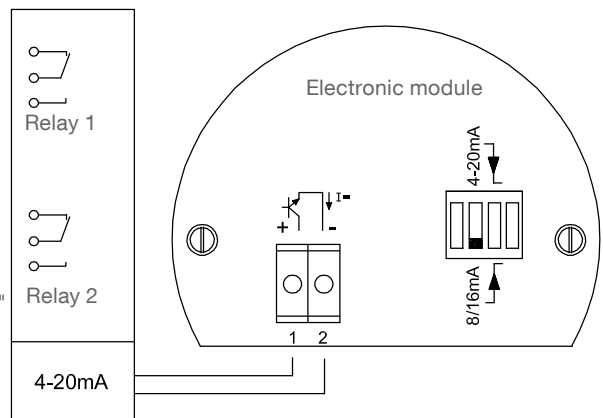

External Limit Value Monitor with 4-20mA input and two relay outputs.

Signal output and Diagnosis

Electronic module Output setting: 4-20mA
8/16mA or 4-20mA

The output states the quality of the vibration signal (amplitude) of the sensor. With the 4-20mA setting it is possible, to recognize material build up on the vibrating fork by evaluation with a PLC. Furthermore it is possible to evaluate the vibration behaviour for critical applications by using a 4-20mA Data logger or PLC.


Remark

In this mode:

- The switch „D ON“ or „D OFF“ has no influence.
- The LED „Signal output“ is off.

Output current:

- **20mA:**
The vibration amplitude is strong (safe measurement, clean fork). With interface measurement (VN10..0 und VN50..0) a max. vibration amplitude of approx. 15mA occurs.
- **< 20mA and >12/12.5mA:**
The vibration amplitude is decreased by material build up or mechanical influence. On setting „Low sensitivity“ the material build up must be more to decrease the output current compared to setting „High sensitivity“.
- **<12/12.5mA and >7/8mA:**
The recommended range indicate a weak vibration. This is also the range, where the internal LED „Diagnosis“ starts blinking to indicate a weak vibration. Depending on the application this value can be changed in the PLC.
The evaluation in the PLC should be done so, that a window between 12/12.5mA and 7/8mA is set. The reaction to indicate „weak vibration“ should be delayed for approx. 10 seconds, so that the indicator does not happen when the vibration is stopped and is started during normal and safe measurement operation.
A lag of 0.5mA (between 12mA and 12,5mA) should be considered to avoid jittering of the output.
- **7/8mA:**
The recommended point to indicate a covered sensor. The point is close to the stop of the vibration at 6mA. Depending on the application this point can be changed in the PLC.
A delay of 1mA (between 7mA and 8mA) should be considered to avoid jittering of output.
- **6mA:**
The vibration has fully stopped.

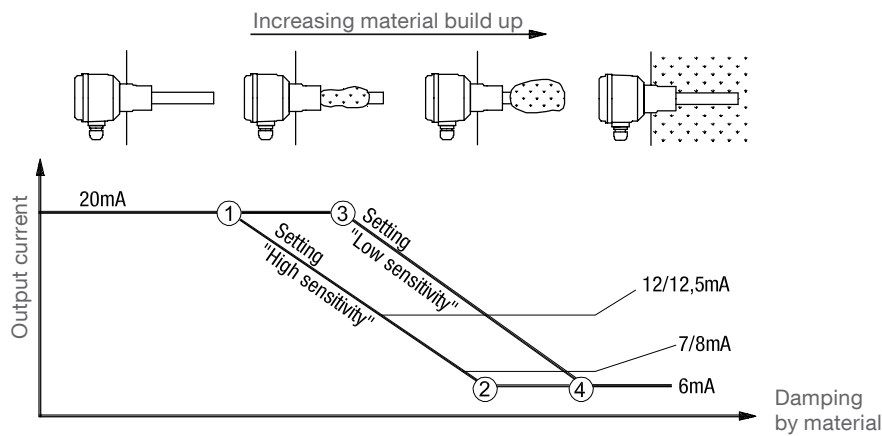

With setting „High sensitivity“:

- ① Amplitude is 100%
- ② Amplitude is 0%

With setting „Low sensitivity“:

- ③ Amplitude is 100%
- ④ Amplitude is 0%

Setting: Sensitivity / Maintenance

All Electronic modules

Sensitivity

All sensors are factory preset. Normally it is not necessary to change the settings. If the bulk material has a strong tendency to cake or deposit the setting switch can be set to position „A“ to decrease the sensitivity of the probe (factory presetting = position „B“).

Approximate min. bulk density on setting:

	A Low sensitivity	B High sensitivity
VN 1000/ 5000	150g/l (9lb/ft³)	50g/l (3lb/ft³)
VN 2000/ 6000	75g/l (4.5lb/ft³)	20g/l (1.2lb/ft³)
VN 2000/ 6000 with enhanced sensitivity	20g/l (1.2lb/ft³)	5g/l (0.3lb/ft³)

VN 1000/ 5000:



For measurement of solids in water setting „A“ is recommended or to take the electronic with potentiometer.

Option interface measurement

(Sensitivity adjustable with potentiometer)

Turn to Min: Vibrating fork gets less sensitive

Turn to Max: Vibrating fork gets more sensitive

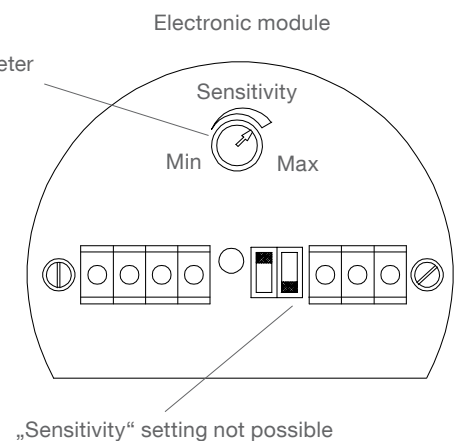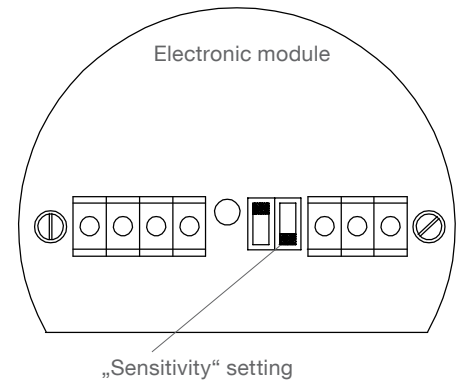

Maintenance


Normally, the device requires no maintenance. However, depending on the application, the following should be observed and inspected:

- Mechanically damaged oscillating rods.
- Mechanically damaged extension rope (VN ..050).
- Coarse cleaning of the vibrating fork.

Changing the Electronic module

- **Intrinsic safe marked Electronic modules are not allowed to be exchanged with Electronic modules without Intrinsic safe marking. Observe warning labels inside the housing and Ex marking on the name plate.**

1. Open the housing lid, remove the pigtails from the device.
2. Disconnect internal wire for earth connection (not on all versions).
3. Unscrew two fastening screws of the electronic module.
4. Pull out the Electronic module.
5. Insert a new Electronic module (until it locks into place) and tighten fastening screws.
6. Connect internal wire for earth connection (not on all versions).
7. Connect the pigtails to the device.

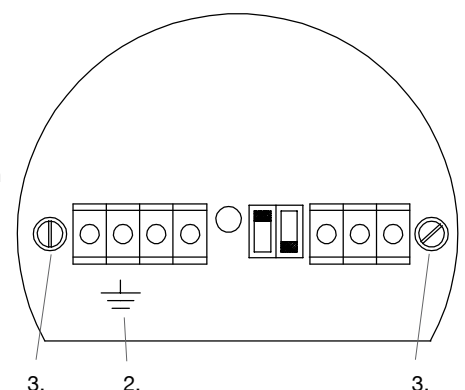

Notes for use in Hazardous Locations

Zone classification

	usable in zone	ATEX category	IEC-Ex Equipment Protection Level (EPL)
Dust applications	20, 21, 22	1 D	Da
	21, 22	2 D	Db
	22	3 D *	Dc
Gas applications	0, 1, 2	1 G	Ga
	1, 2	2 G	Gb
	2	3 G	Gc

* in case of conductive dust additional requirements for the installation may be necessary

General Notes

Marking

Devices with Ex approval are marked on the name plate.

Process pressure



The device construction allows process over-pressure up to 6/16 bar (87/232psi) (see name plate). These pressures are allowed for test purposes. The definition of the Ex approvals are only valid for a container-over-pressure between -0.2..+0.1 bar (-2.9..+1.45psi). For higher or lower pressures the approvals are not valid.

Process and ambient temperature

The permitted temperature ranges are marked on the name plate.

Notes for use in Hazardous Locations

Permitted zones (categories) for mounting in partition wall


Version with standard-housing

(VN 1000 / 2000 / 5000 / 6000)

With use of Electronic module:

	Universal voltage Relay SPDT		NAMUR IEC 60947-5-6 (intrinsic safe) *			
	Universal voltage Relay DPDT		8/16mA or 4-20mA (intrinsic safe) *			
	3-wire PNP					
	2-wire without contact					
EPL (IEC-Ex)	Da	Db	Da	Db	Ga	Gb **
Category (ATEX)	1D	2D	1D	2D	1G	2G **
Zone	20	21	20	21	0	1

EPL (IEC-Ex)	Da	Da	Da	Da	Ga	Ga
Category (ATEX)	1D	1D	1D	1D	1G	1G
Zone	20	20	20	20	0	0

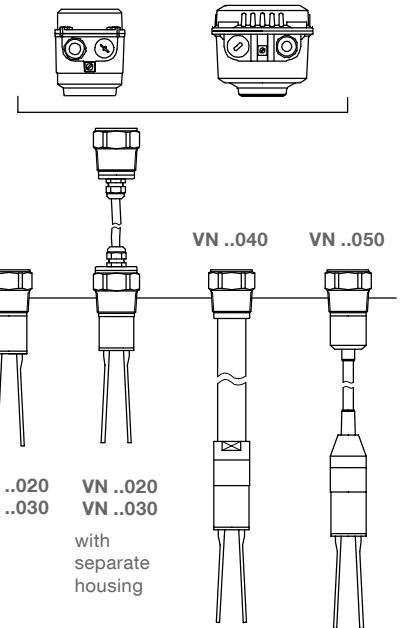

* The units are marked on the name plate with "1G" and "1D" (ATEX) resp. "Ga" and "Da" (IEC-Ex). They can be also mounted in a partition wall with specification zone 0/1 and zone 20/21.

- ! ** VN ..040 and VN ..050:
 When mounting the units in a partition wall, that separates Zone 0 from
 ● Zone 1: The units have no safe separation between Zone 0 and Zone 1. It must be considered, that gas can pass from Zone 0 through the unit to Zone 1.


Version with d- and de-housing

(VN 5000 / 6000 ; flameproof/increased safety)

With use of all Electronic modules:

EPL (IEC-Ex)	Gb	Db
Category (ATEX)	2G	2D
Zone	1	21

EPL (IEC-Ex)	Gb	Da
Category (ATEX)	2G	1D
Zone	1	20

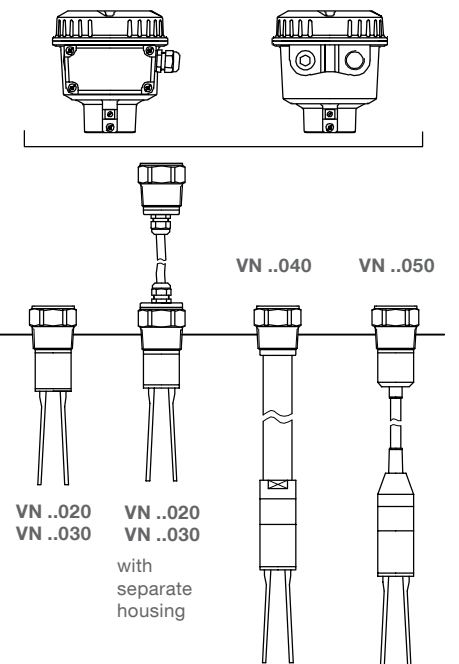


Notes for use in Hazardous Locations

Max. Surface Temperature and Temperature Class

The temperature marking on the name plate  refers to the instruction manual.
 On the following tables the relevant temperature ratings are shown.

The maximum surface temperature (resp. temperature class) is the warmest temperature of the unit which could occur during malfunction (according to Ex-definition).

The data tables are valid, when it can be guaranteed during installation that the screwed connection has a maximum temperature of 80°C (176°F) during normal use.

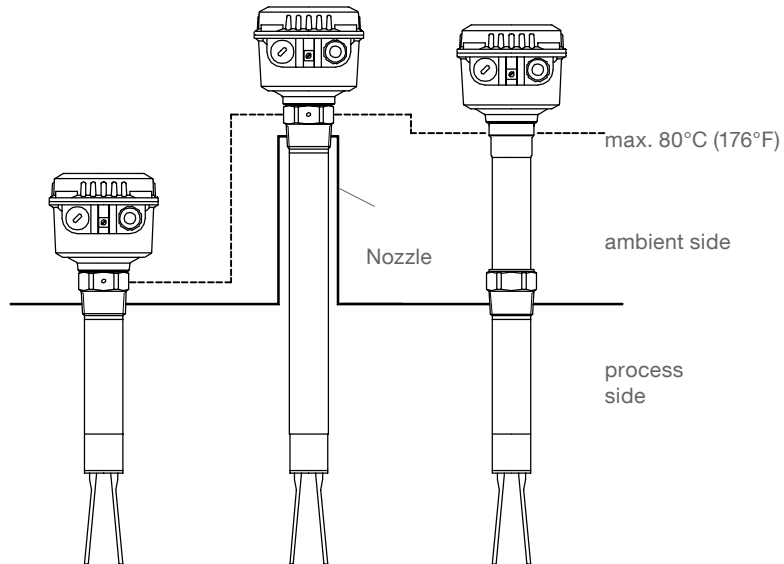

Versions with intrinsic safe electronic modules:
 NAMUR IEC 60947-5-6
 8/16mA or 4-20mA

Max. ambient temperature	Max. process-temperature	Max. surface temperature	Temperature class (Division System)	Temperature class (Zone System)
50°C (122°F)	70°C (158°F)	80°C (176°F)	T6	T6
60°C (140°F)	80°C (176°F)	85°C (185°F)	T6	T5
	90°C (194°F)	90°C (194°F)	T5	T5
	100°C (212°F)	100°C (212°F)	T5	T4
	110°C (230°F)	110°C (230°F)	T4A	T4
	120°C (248°F)	120°C (248°F)	T4A	T4
	130°C (266°F)	130°C (266°F)	T4	T4
	140°C (284°F)	140°C (284°F)	T3C	T3
	150°C (302°F)	150°C (302°F)	T3C	T3

Versions with non intrinsic safe electronic modules:
 Universal voltage Relay SPDT
 Universal voltage Relay DPDT
 3-wire PNP
 2-wire without contact
 8/16mA or 4-20mA

Max. ambient temperature	Max. process-temperature	Max. surface temperature	Temperature class (Division System)	Temperature class (Zone System)
60°C (140°F)	80°C (176°F)	120°C (248°F)	T4A	T4
	90°C (194°F)	120°C (248°F)	T4A	T4
	100°C (212°F)	120°C (248°F)	T4A	T4
	110°C (230°F)	120°C (248°F)	T4A	T4
	120°C (248°F)	120°C (248°F)	T4A	T4
	130°C (266°F)	130°C (266°F)	T4	T4
	140°C (284°F)	140°C (284°F)	T3C	T3
		150°C (302°F)	150°C (302°F)	T3C

Assembly VN ..040

Manufacturing of the Extension tube

! Obtain instruction manual for proper manufacturing of the extension tube. In case of deviation from the instruction manual the unit is not safe for use in Hazardous Locations.

Demands on the Extension tube

Material: Stainless steel 1.4301 (SS304) or 1.4305 (SS301) or 1.4571 (SS316Ti) or 1.4404 (SS316L)

The tube must be manufactured from one single piece. It is not allowed to weld two or more pieces together.


Carefully observe max. length, diameter, wall thickness, thread, tolerances as specified in the drawing.

All sharp edges must be removed to protect the cable and sealing rings.

Thread testing


Each thread must be tested with no-go ring gauge according to standard DIN ISO 228-1 (G1") (G-version) or ANSI B 1.20.1 (NPT 1") (NPT version)

Version with G1" (DIN ISO 228-1) thread (selection price list pos.5 A,L,M)

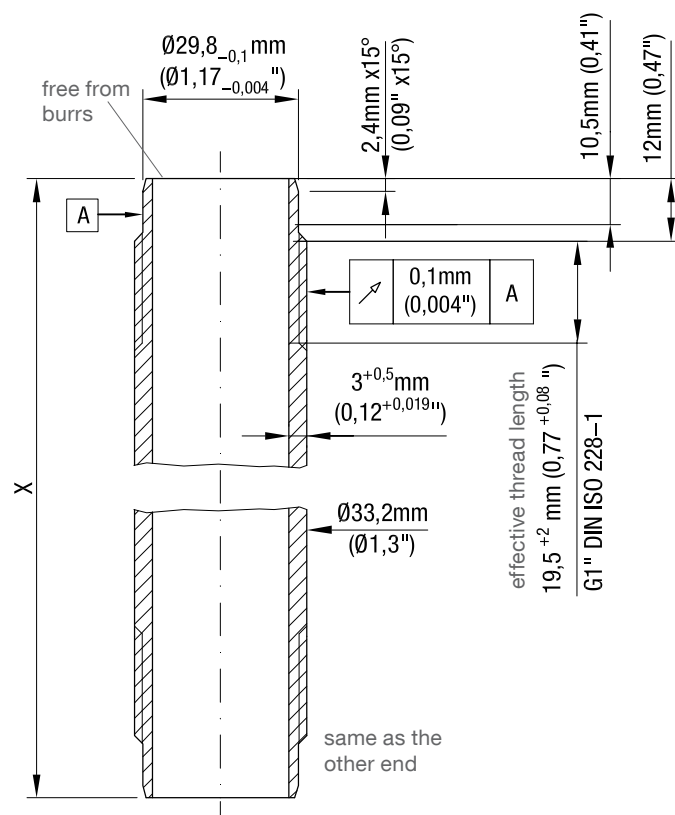

Pipe length X:
 VN 1040: X = L - 180mm (X = L - 7.1")
 VN 2040: X = L - 250mm (X = L - 9.8")
 VN 2040 with pos.26 x,a,b: X = L - 275mm (X = L - 10.8")
 Note: L is the total extension length

Version with 1" (ANSI B 1.20.1) NPT thread (selection price list pos.5 B,S,T,U)

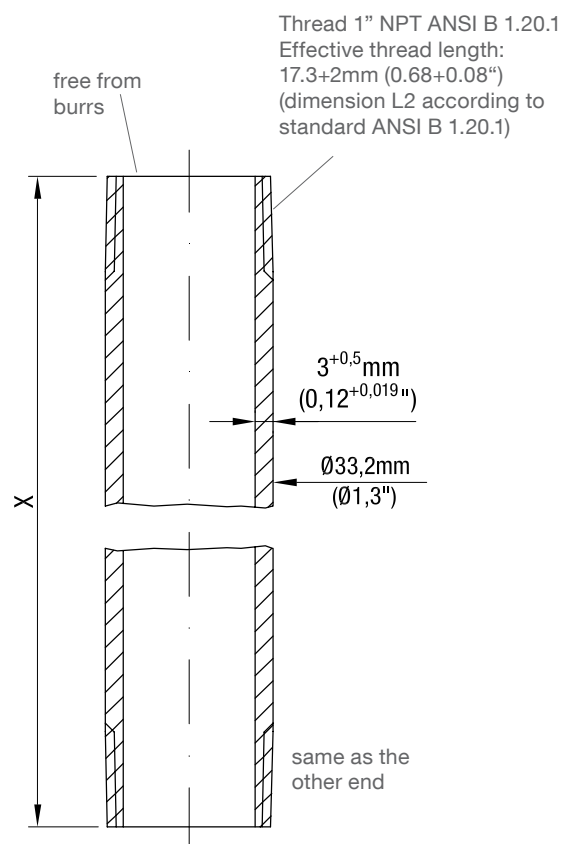

Pipe length X:
 VN 1040: X = L - 190mm (X = L - 7.5")
 VN 2040: X = L - 260mm (X = L - 10.2")
 VN 2040 with pos.26 x,a,b: X = L - 285mm (X = L - 11.2")
 Note: L is the total extension length

Assembly VN ..040 with standard housing

Assembly of the unit

1. Mounting of the Extension tube

- ! **The tube must be assembled very carefully to ensure permanent sealing and mechanical stability.**
- **Observe the follow mounting instructions.**

- ! **Make sure that the thread of the extension tube and the thread of the screwed piece/oscillating piece is the same type (do not mix G and NPT thread).**

- 1.1. Feed the connecting wire through the 1" Extension tube and the screwed piece. Use a separate taut wire for easy working.
- 1.2. Screw the 1" Extension tube into the oscillating piece and the screwed piece. Use a 36mm (1.42") open-end wrench to attach the fork piece (do not use the forks).


G version: Tighten the 2 fixing screws.

Sealing:

There must be tight connections at both ends of the extension tube.

G version: An o-ring is required at both ends to ensure proper sealing and must not be damaged. Only original o-rings from the manufacturer are allowed to be used.


NPT version: The threads must be sealed with temperature resistant sealing for 150°C (302°F).

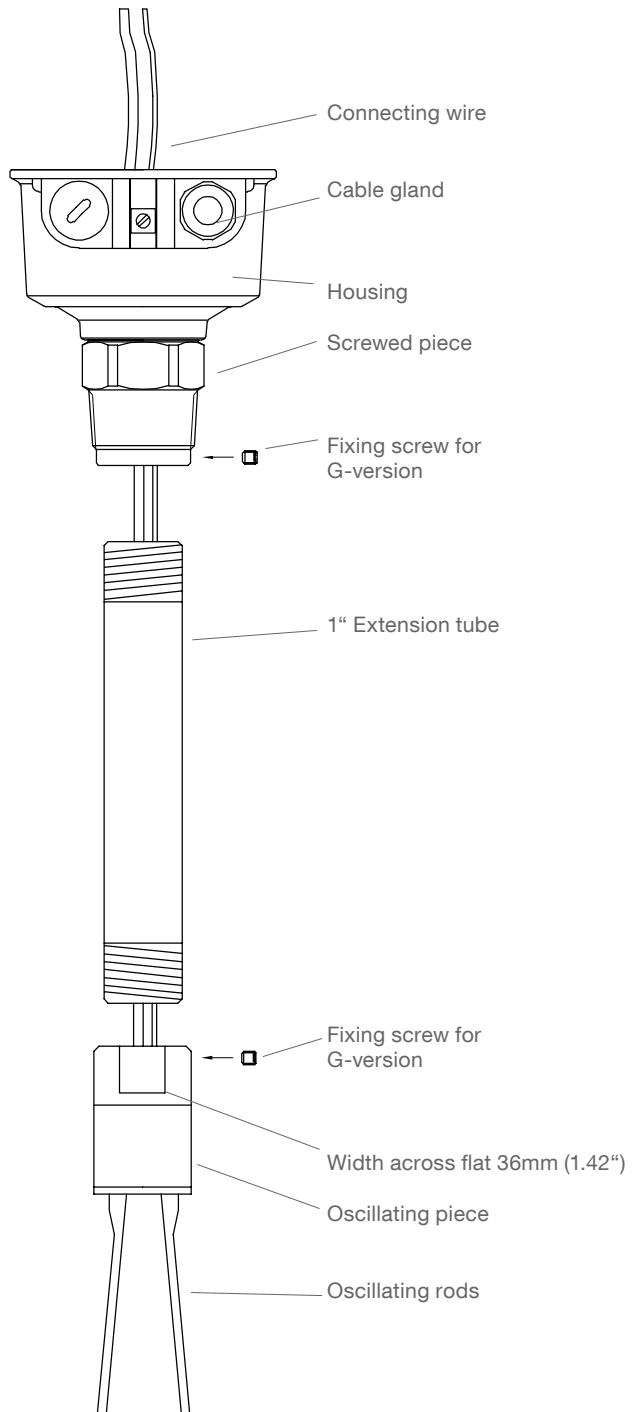

Assembly VN ..040 with standard housing


2. Preparing the cables

Shorten the earth cable to 220mm (8.66") and sensor cables to 150mm (5.9"). Prepare cables as shown.

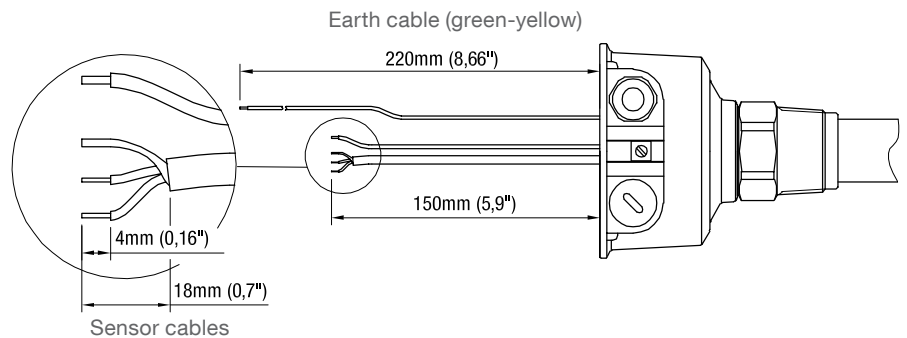


3. Connecting the cables

Connect sensor cables to the terminal connection piece. Fix the cables with cable clamps. Connect electronic module and terminal connection piece. Be sure that all terminals are tightly screwed in.

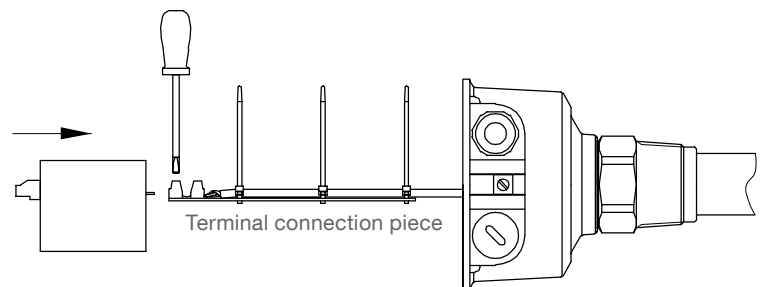


Connect the earth cable from the vibrating fork to the housing (see figure at the bottom of this page).

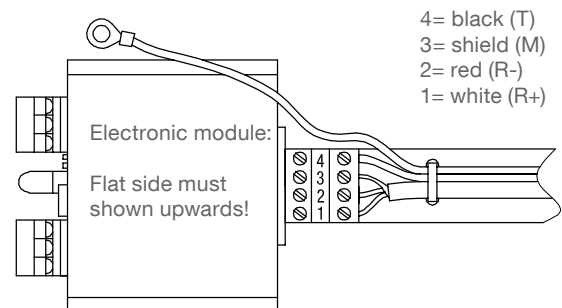


4. Fixing the electronic module

Insert electronic module into housing. The terminal connection piece is used to guide the cables. Fold connection cables as shown. Use cylinder head screws to fix the electronic module.

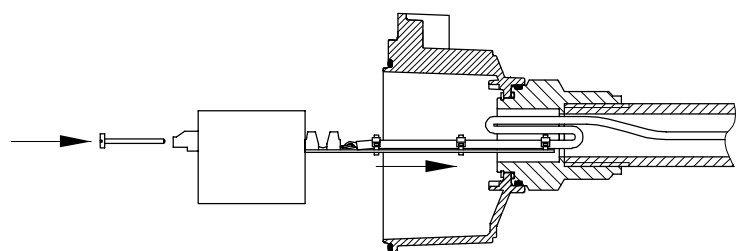

Connect the earth cable from the electronic module to the housing (not on all versions).

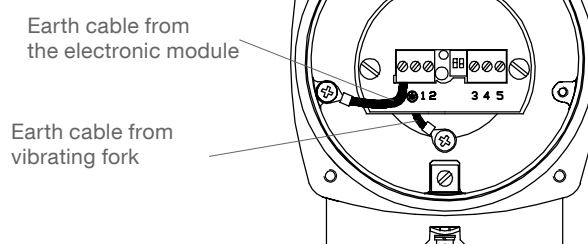

Assembly VN 5040/ 6040 with d or de-housing

Assembly of the unit

1. Mounting of the Extension tube to oscillating piece and preparing cables



The tube must be assembled very carefully to ensure permanent sealing and mechanical stability. Observe the follow mounting instruction.



Make sure, that the thread of the extension tube and the thread of the screwed piece/oscillating piece is the same type (do not mix G and NPT thread).



Before starting mounting, check if an intrinsic safe oscillating piece is provided. To avoid mixing with other types, these pieces are marked with a label "Intrinsic safe circuit" as shown on the drawing (the label is fixed to the sensor cables directly on the oscillating piece). This marking guaranties that the provided oscillating piece is correct. Not marked oscillating pieces are not allowed to use.

- 1.1. Feed the connecting wire through the 1" Extension tube. Use a separate taut wire for easy working.
- 1.2. Screw the 1" Extension tube into the oscillating piece. Use a 36 mm (1.42") open-end wrench, do not turn the oscillating rods.

G version: Tighten the Fixing screw


Sealing:

There must be a seal connection between the 1" tube and the screwed piece and the oscillating piece.

G version: An o-ring is required at both ends to ensure proper sealing and must not be damaged. Only original o-rings from the manufacturer are allowed to be used.

NPT version: The thread must be sealed with temperature resistant sealing for 150°C (302°F).

- 1.3. Shorten all cables to 80 mm (3.15"). Prepare cables as shown.

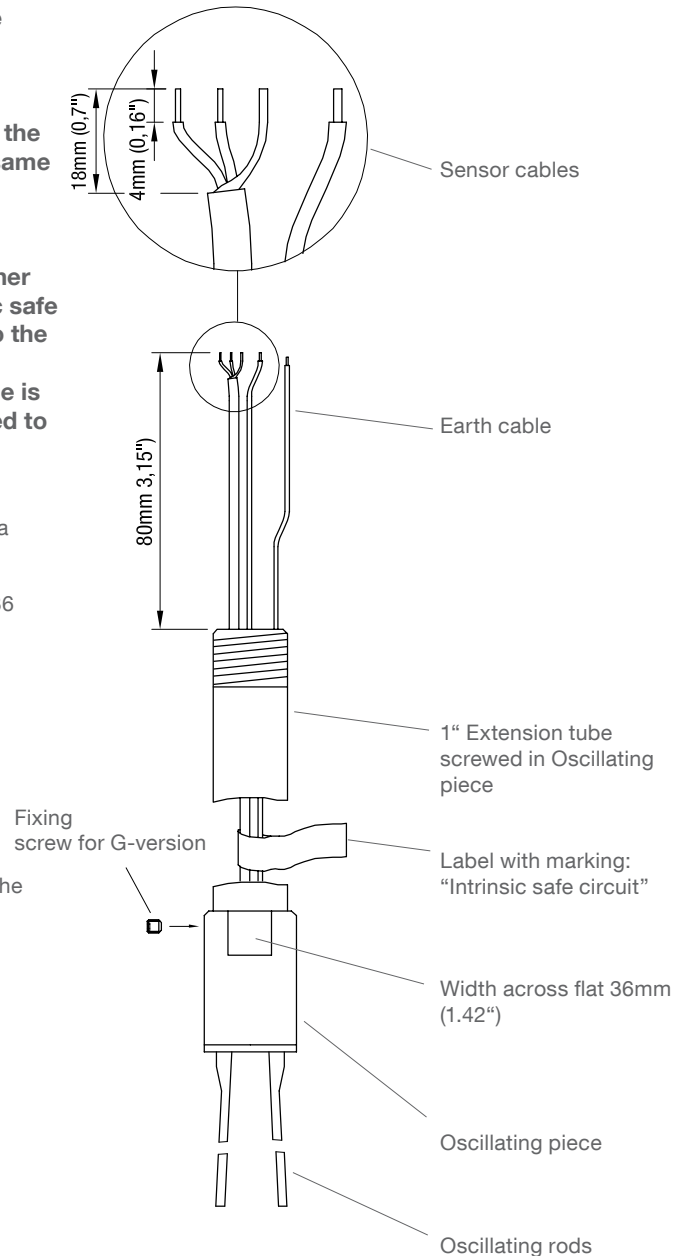

Assembly VN 5040 / 6040 with d or de-housing


2. Soldering the cables

Guide the big shrink hose over all cables.

Guide the small shrink hose over each cable.


Solder the cables as shown.

Shrink the small shrink hose with a hot air blower. Ensure that the exposed wires are all covered with shrink hose

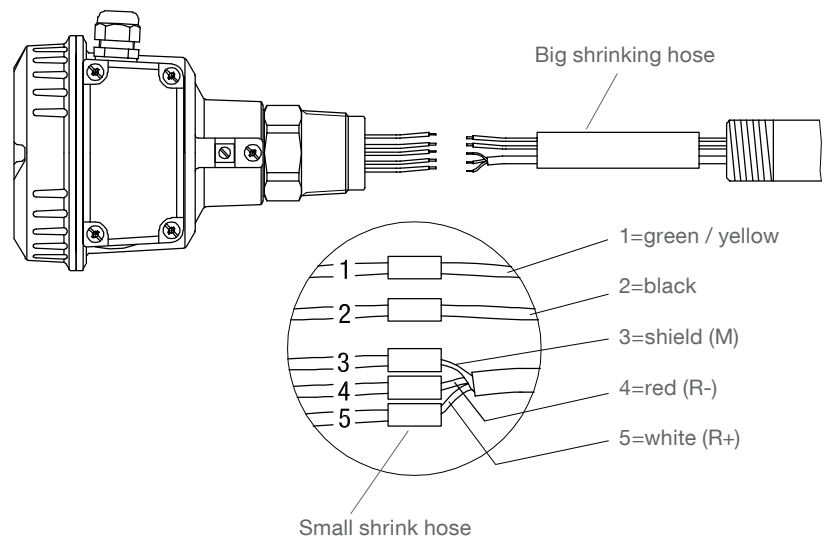

3. Shrinking all cables

Push the big shrink hose over the small shrink hoses and shrink with a hot air blower.

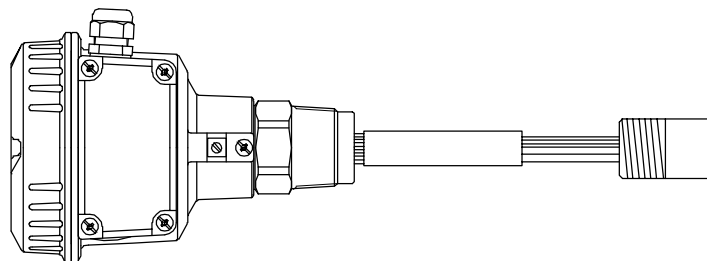


4. Mounting of the extension tube to housing side

Push the cables carefully into the extension tube.

Screw the 1" Extension tube into the screwed piece. Use a 36 mm (1.42") open-end wrench, do not turn the oscillating rods.

G version: Tighten the fixing screw

Sealing: see 1.2

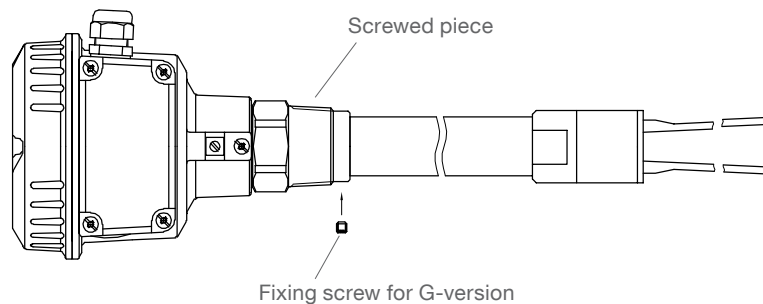

Assembly: VN ..020 / ..030 with separate housing

Assembly vibration fork/housing

! Before starting mounting, check if an intrinsic safe oscillating piece is provided. To avoid mixing with other types, these pieces are delivered with a directly assembled cable gland. This existing cable gland guarantees that the provided oscillating piece is correct. Oscillating pieces without a directly mounted cable gland are not allowed to use.


1. Remove electronic module.
2. For version with Ex approval:
Feed connecting wire through the delivered metal hose or through a metal tube.

! To avoid static discharge and to provide mechanical protection of the connection cable, the connection cable must be installed inside the delivered metal hose or inside a robust metal tube (steel, inner diameter 10..14mm (0.39..0.55")). The metal hose or metal tube must cover the whole length of the connection cable close to the cable glands. The metal hose or metal tube must be grounded and robustly mounted. Ensure that the connection wire is not damaged by sharp edges of the metal tube or the metal hose.

3. Feed connection cable through the cable gland at the housing.
4. Connect connection cable to the plug. Obtain right connecting sequence (see drawing).
5. Connect plug to the electronic module.
6. Fix electronic module into the housing with 2 screws. To do this, move connecting cable with electronic module downwards. Take care, that the plug is not removing.
7. Tighten the cable gland on the housing.

The cable gland on the housing used for the connecting cable must be closed tightly, so ingress protection IP65 is reached. Otherwise the unit is not safe for use in Hazardous Locations.

! The cable glands must be protected against mechanical damage.

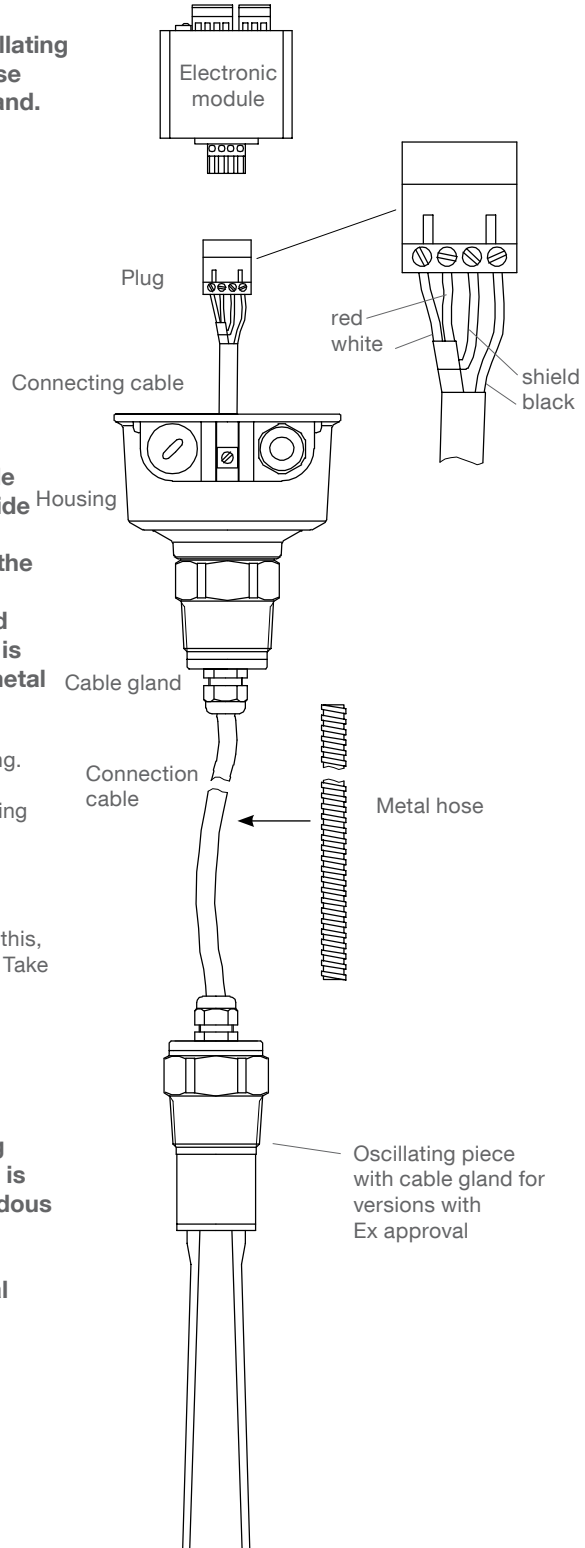

Assembly: VN ..020 / ..030 with separate d- or de- housing

Assembly vibration fork/housing

! Before starting mounting, check if an intrinsic safe oscillating piece is provided. To avoid mixing with other types, these pieces are delivered with a directly assembled cable gland. This existing cable gland guarantees that the provided oscillating piece is correct. Oscillating pieces without a directly mounted cable gland are not allowed to use.

1. Feed connecting wire through the delivered metal hose or through a metal tube.

! To avoid static discharge and to provide mechanical protection of the connection cable, the connection cable must be installed inside the delivered metal hose or inside a robust metal tube (steel, inner diameter 10..14mm (0.39..0.55")). The metal hose or metal tube must cover the whole length of the connection cable close to the cable glands. The metal hose or metal tube must be grounded and robustly mounted. Ensure that the connection wire is not damaged by sharp edges of the metal tube or the metal hose.

2. Feed connection cable through the cable gland at the tube.
3. Connect connection cable to the plug. Obtain right connecting sequence (see drawing).
4. Connect plug and mating plug.
5. Screw the tube into the threaded bush. While doing this, move the connecting cable downwards. Take care, that the plug is not getting loose. While screwing, the cable gland must be open to avoid, that the connecting wire is being twisted.
 Note: Inside the threaded bush is a seal ring which seals the tube to the threaded bush.
6. Tighten the cable gland on the tube.
7. Fasten the two fixing screws.

The cable gland on the tube used for the connecting cable must be closed tightly, so ingress protection IP65 is reached. Otherwise the unit is not safe for use in Hazardous Locations.

! The cable glands must be protected against mechanical damage.

